


ROOF
CONSOLE KIT

机顶控制盒套件
安装说明书

适用范围：吉姆尼-JB74 / JC74 (18-26年款)
APPLICABLE SCOPE: JIMNY-JB74 / JC74 (2018-2026 models)

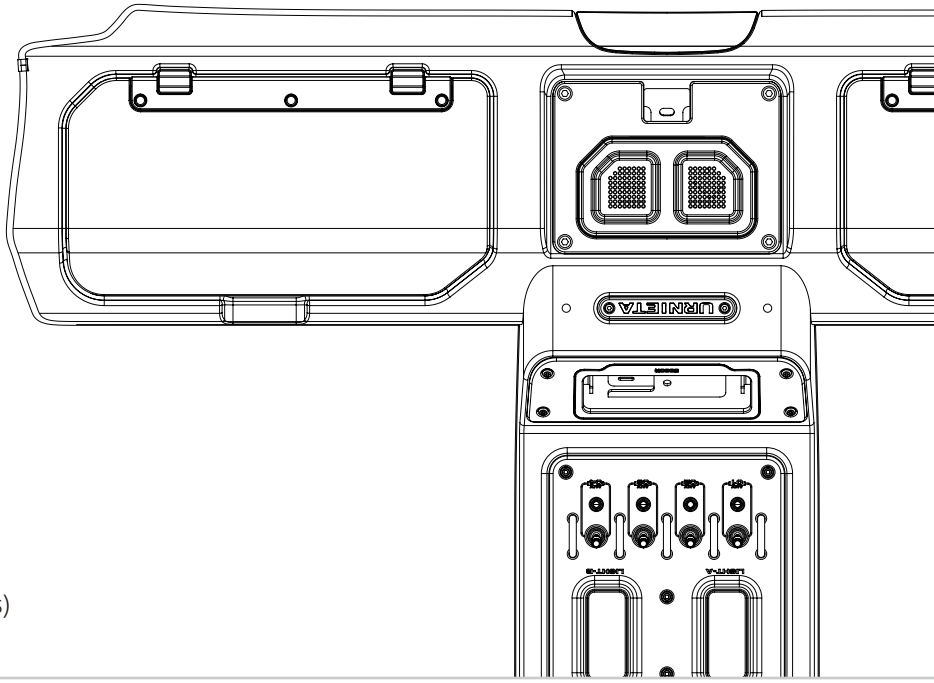

#1

拆除原车遮阳板、遮阳板卡扣、前部阅读灯及开关


Remove the original vehicle sun visors, sun visor clips, front reading light and switch



#2

使用遮阳板盒支撑支架专用螺丝安装两侧支撑支架



Use the dedicated screws for the sun visor box support brackets to install the support brackets on both sides

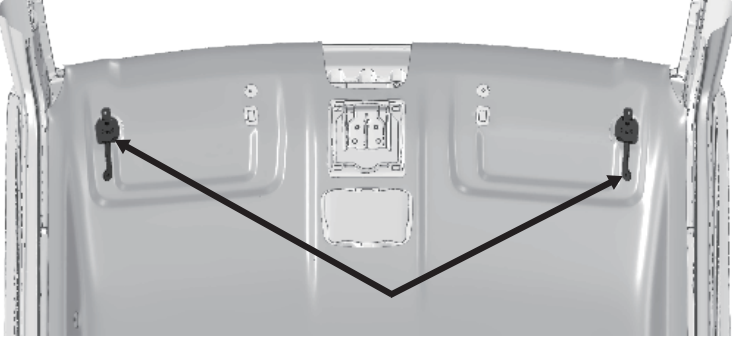

#3

使用遮阳板安装支架组件安装螺丝固定遮阳板前支架
(注意:此步骤螺丝固定即可无需锁紧,以便后续调整)

Use the sun visor mounting bracket assembly screws to secure the front bracket of the sun visor with the mounting screws (Note: For this step, simply secure the screws without tightening them, to allow for adjustments later).

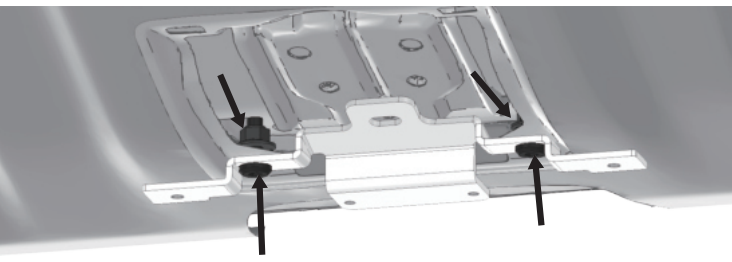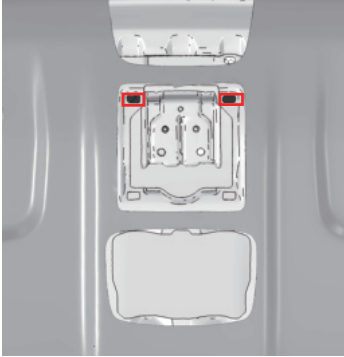

#4

使用后视镜固定螺丝与遮阳板安装支架组件安装螺丝、如右图所示将后视镜与喇叭支架一起固定在车顶上（注意：此步骤螺丝固定即可无需锁紧，以便后续调整）



Use the rearview mirror mounting screws and the sun visor mounting bracket assembly screws to secure the rearview mirror and the speaker bracket to the roof, as shown in the figure on the right. (Note: For this step, simply secure the screws in place—do not tighten them fully—to allow for adjustments later.)



#5

使用遮阳板安装支架组件安装螺丝固定遮阳板主支架


Use the sun visor mounting bracket assembly installation screws to secure the sun visor main bracket

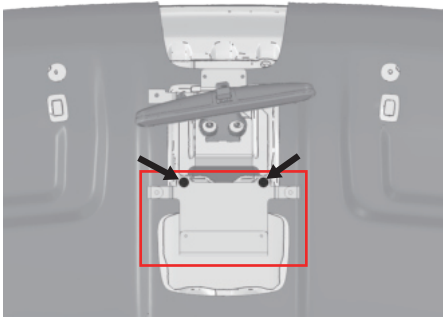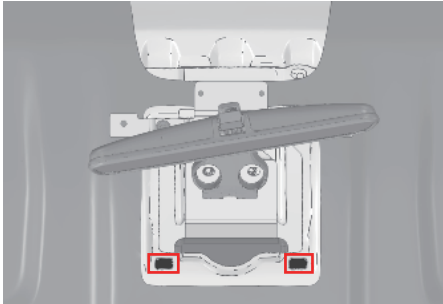

#6

使用喇叭支架与支撑主支架安装螺丝将喇叭支架与主支架锁在一起（注意：此步骤螺丝固定即可无需锁紧，以便后续调整）


Use the speaker bracket and the mounting screws for the main bracket to secure the speaker bracket to the main bracket (Note: For this step, simply secure the screws in place—do not tighten them fully—to allow for adjustments later).

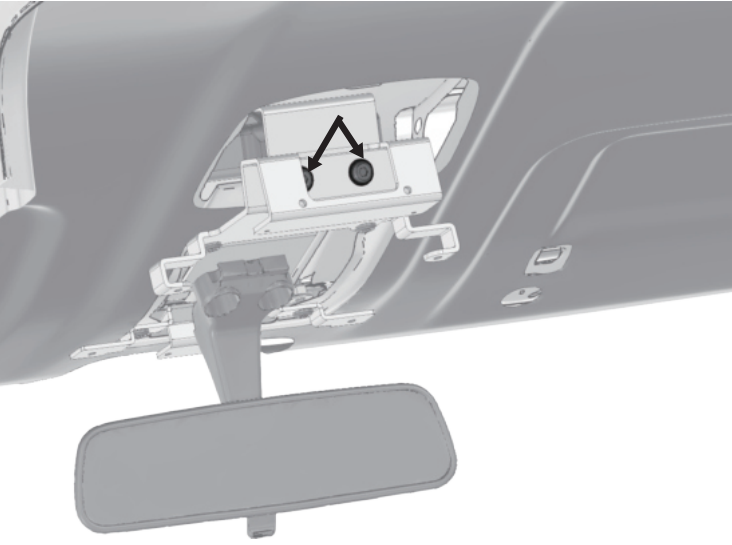

#7

使用ACC遮挡盖固定螺丝固定ACC遮挡盖，螺丝无需锁紧以便后面调节（注意：高配车型此位置有ACC前车跟随的此步骤无需安装）


Use the ACC cover fixing screws to secure the ACC cover; the screws do not need to be tightened, to allow later adjustment (Note: on high-trim models that have ACC front-vehicle following at this position, this step does not need to be installed)

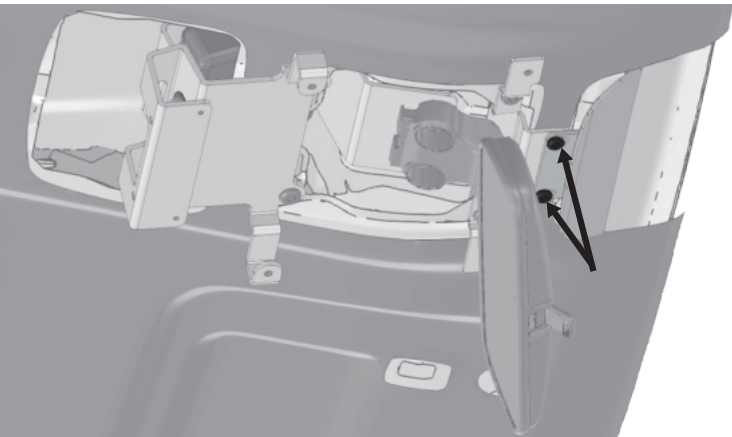

#8

安装遮阳板盒主体


Install the main body of the sun visor housing

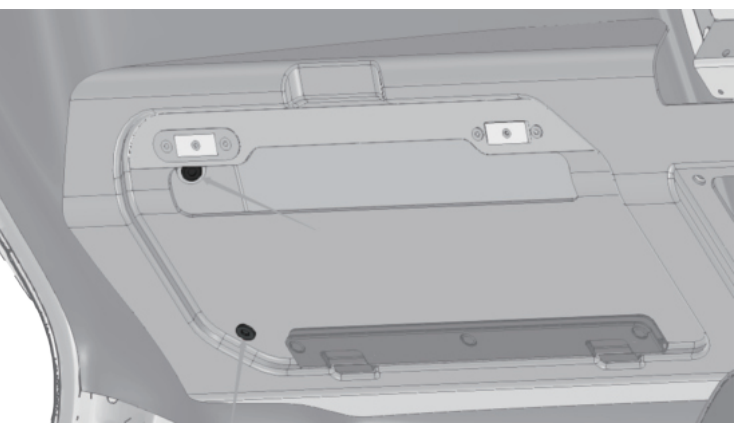

#8-01

拆下后视镜，打开透明遮阳板使用遮阳板盒安装螺丝固定遮阳板盒左右侧（注意：1号位置使用薄平头螺丝）


Remove the rearview mirror, open the transparent sun visor, and use the sun visor box mounting screws to secure the left and right sides of the sun visor box (Note: Use thin flat-head screws at position 1).

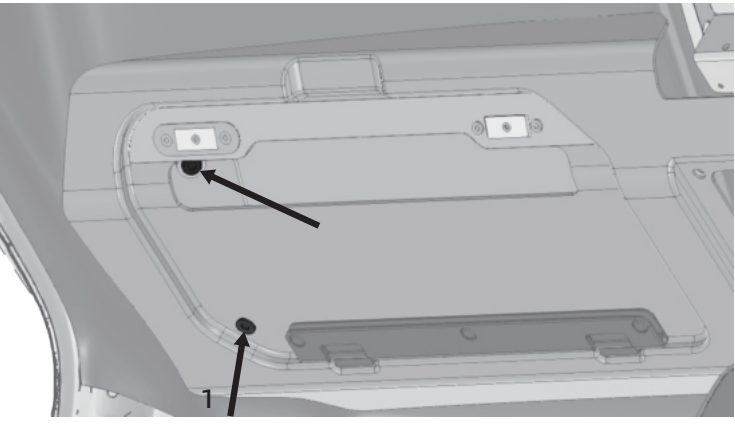

#8-02

将主支架前支架与ACC盖板调整到合适位置，使用喇叭盖板螺丝固定中间


Adjust the main bracket, front bracket and ACC cover plate to the proper position, and use the speaker cover plate screws to secure the middle

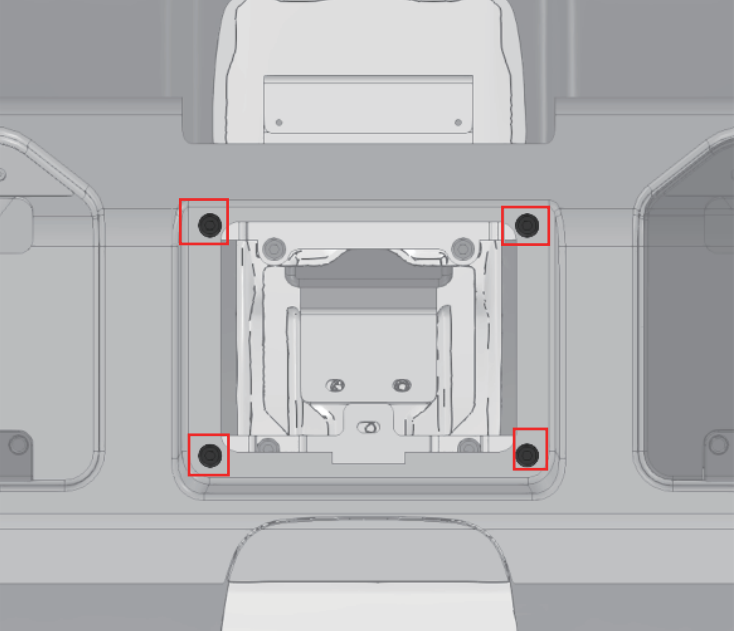

#8-03

使用工具锁紧主支架与前支架螺丝


Use tools to tighten the screws of the main bracket and the front bracket

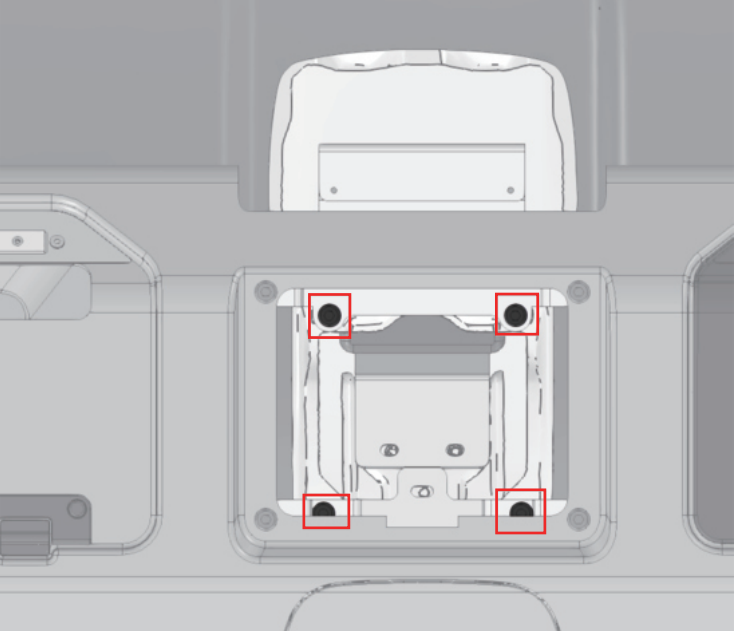

#9

拆下遮阳板盒，将前ACC盖板锁紧后将遮阳板盒按前面步骤固定在车顶(注意:在盒体边缘使用包边条进行防护)


Remove the sun visor box, secure the front ACC cover, and then attach the sun visor box to the roof following the steps above (Note: Use edge trim to protect the edges of the box).

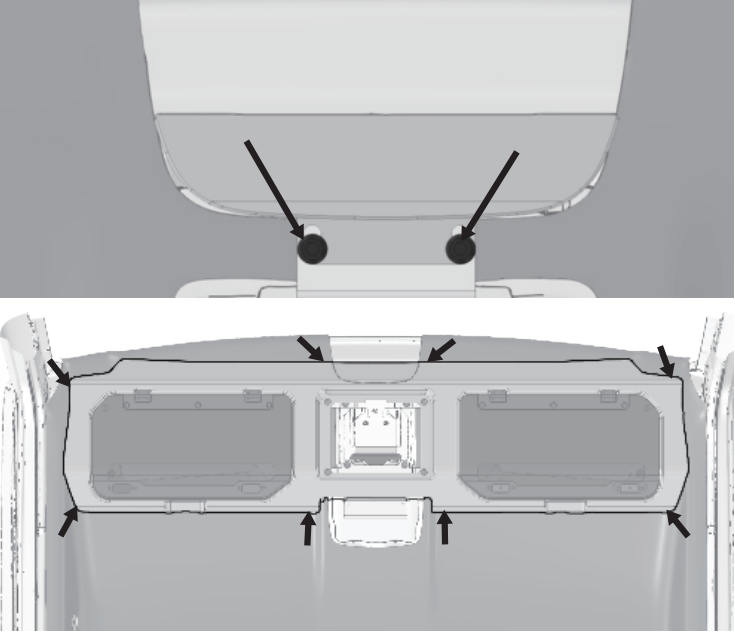

#10

将后视镜使用后视镜螺丝固定在车顶


Fix the rearview mirror onto the roof using the rearview mirror screws

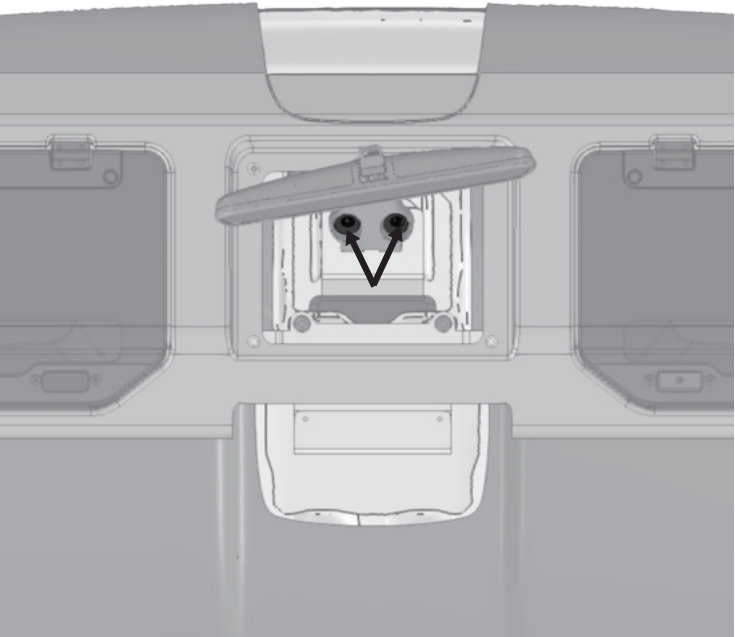

#11

电台安装

Radio installation

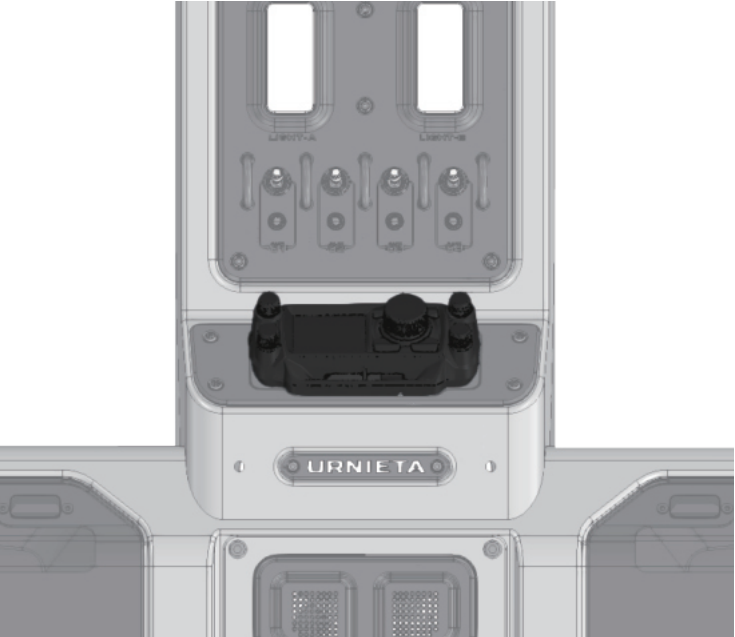


#11-01-A1

(此处的“A”为6000R,2730E安装方法的分章)
(The "A" here is the sub-section for the 6000R and 2730E installation method)

6000R与2730E安装（此两种支架直接安装在主支架上。另外一侧直接使用螺丝固定在电台上面）

6000R and 2730E installation (these two brackets are installed directly onto the main bracket.The other side is fixed directly onto the radio with screws)

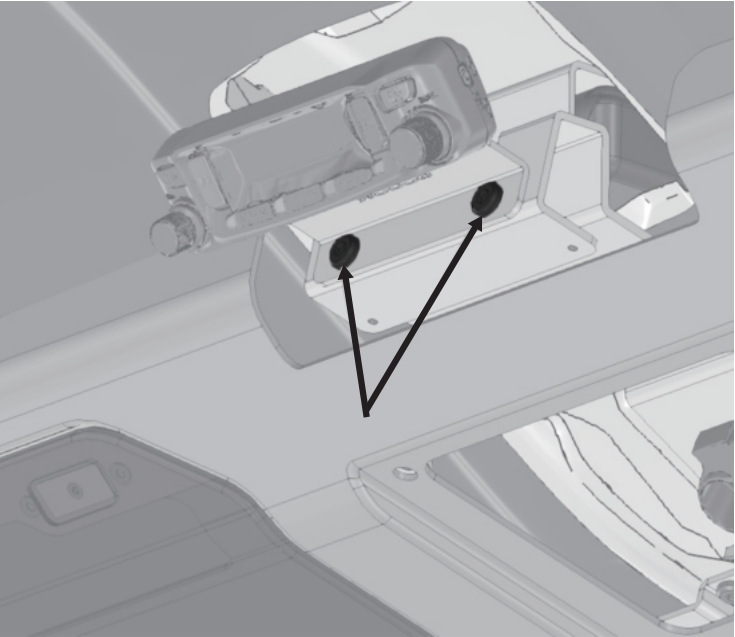


#11-01-B1

(此处的“B”为500D,510D安装方法的分章)
(The "B" here is the sub-section for the 500D and 510D installation method)

先将图示位置面板拆下,将外框套入电台背部并使用面板自带螺丝锁紧

First remove the panel at the position shown in the figure, fit the outer frame onto the back of the radio, and tighten it using the panel's own screws

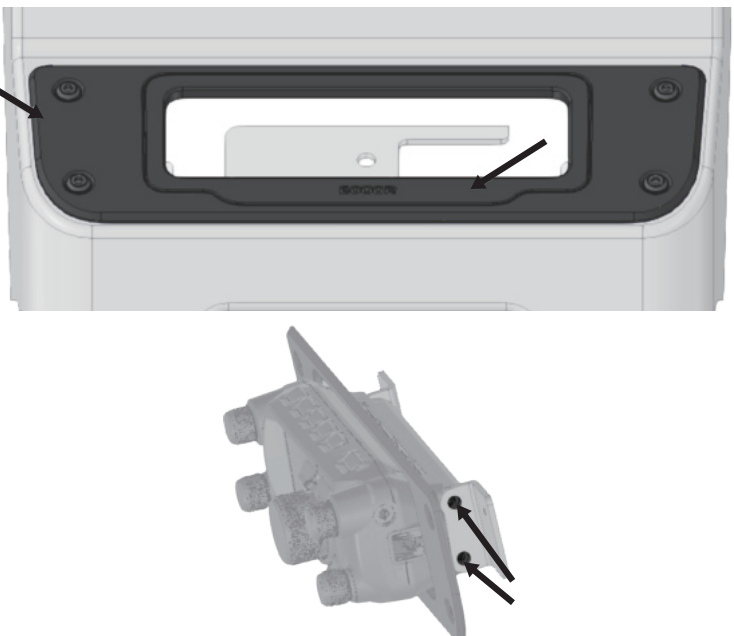


#11-01-B2

(此处的“B”为500D,510D安装方法的分章)
(The "B" here is the sub-section for the 500D and 510D installation method)

将装好的面板与500D专用小支架一起装在机顶盒上

Install the assembled panel together with the 500D dedicated small bracket onto the roof console

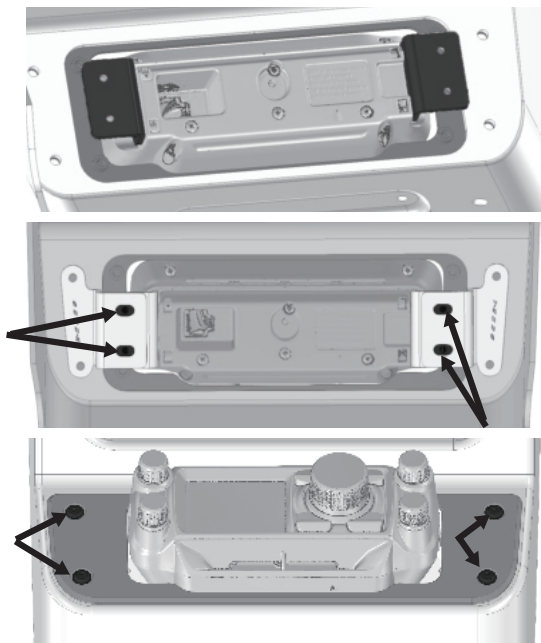


#12-01

(此处的为线束安装方法的分章)
(This section covers the wiring harness installation method.)

此处机顶盒控制线束与电台面板线束需留30cm

Here, leave 30 cm of the roof console control wiring harness and the radio panel wiring harness

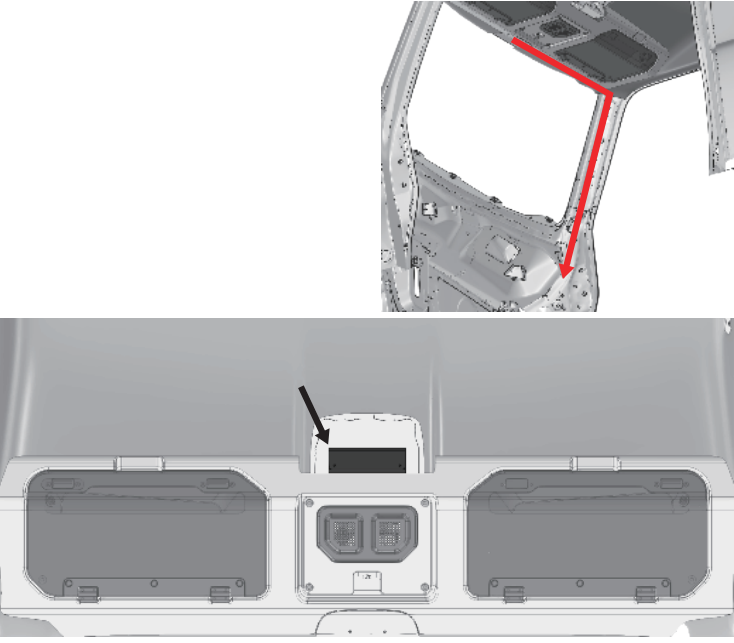


#12-02-A1

(此处的“A”为YBOS或继电器盒对插安装方法的分章)
(The "A" here is the sub-section for the YBOS or relay box plug-in connector installation method)



#12-02-B1

(此处的“B”为继电器安装方法的分章)
(The "B" here is the sub-section for the relay installation method)

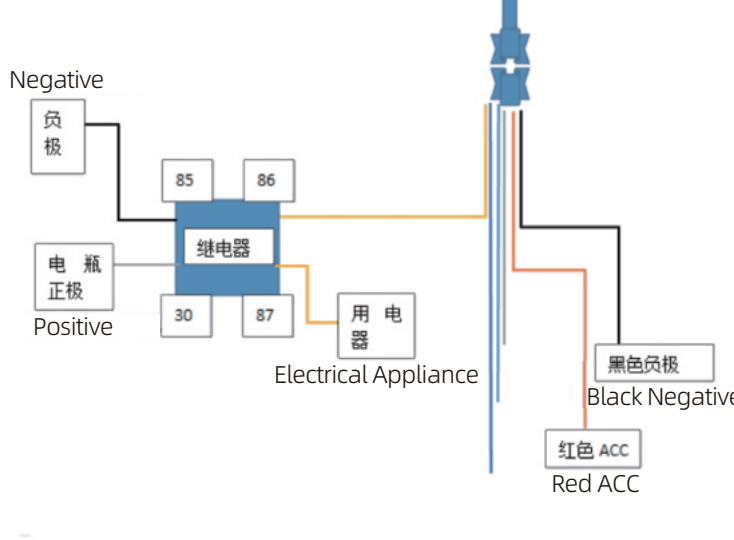

#13

机顶盒安装

Roof console installation




#13-01-A1

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

使用小导轨专用螺丝先将支架固定在机顶盒上

Use the small rail dedicated screws to first fix the bracket onto the roof console

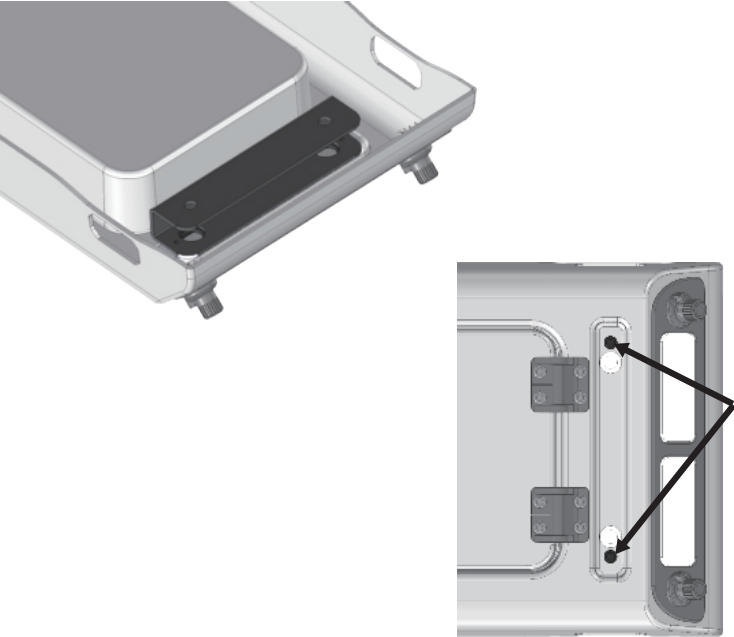


#13-01-A2

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

将大导轨穿过机顶盒预留孔位并将导轨均匀分布在两侧

Pass the large rails through the reserved holes in the roof console and distribute the rails evenly on both sides

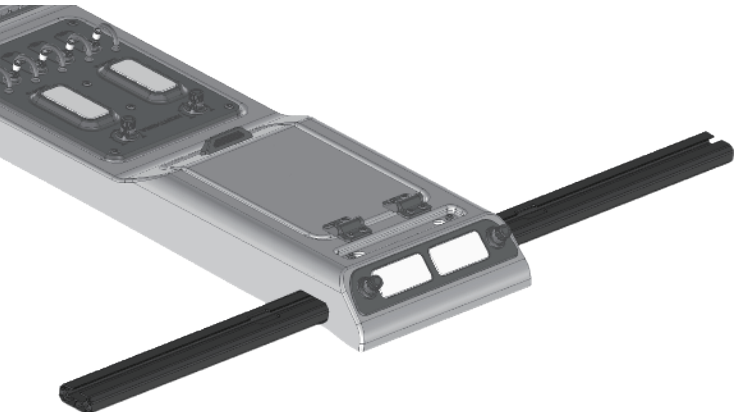


#13-01-A3

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

将专用导轨滑块从滑轨预留槽位放入，使其滑到安装孔位

Insert the dedicated rail sliders through the reserved slots in the slide rails and slide them to the mounting hole positions

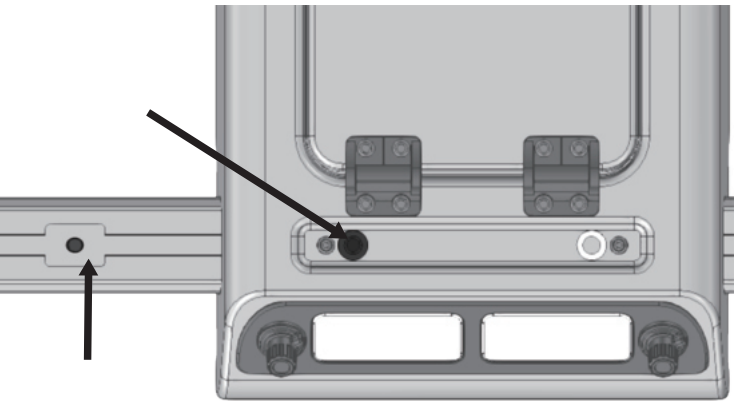


#13-01-A4

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

使用导轨专用螺丝(斜平头内六角M8*10)在安装孔位锁紧滑块，并拆除2号位螺丝

Use the rail dedicated screws (countersunk flat-head hex socket M8*10) to tighten the sliders at the mounting hole positions, and remove the screws at position No. 2

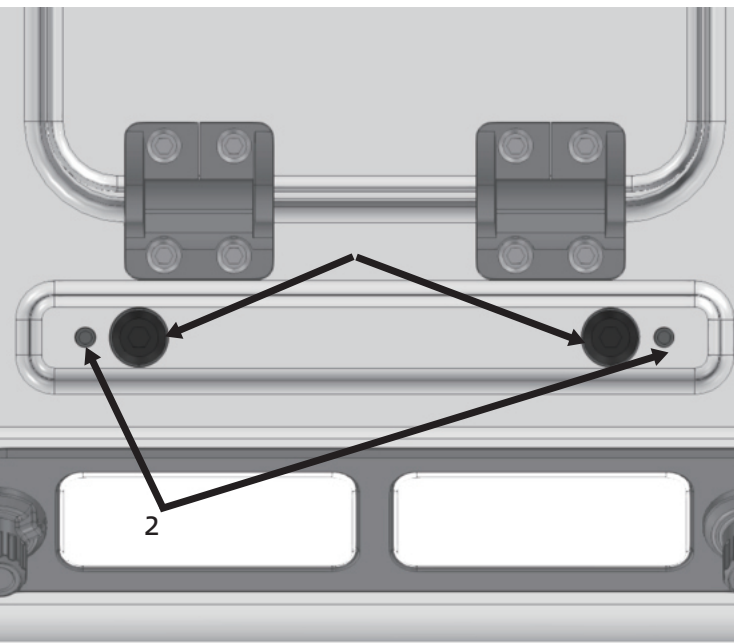


#13-01-A5

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

使用2号位拆除的螺丝将小导轨锁紧

Use the screws removed from position No. 2 to tighten the small rails

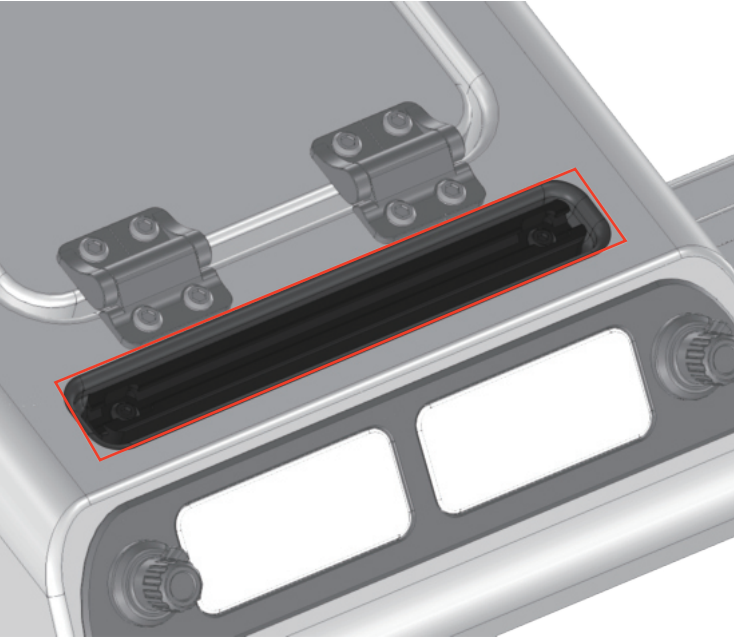


#13-01-A6

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 3-door Jimny installation method)

将装好导轨的机顶盒使用机顶盒固定螺丝安装在车顶上(注意:前面使用LOGO螺丝一起固定，后导轨两侧插入橡胶堵头)

Install the roof console with the rails fitted onto the roof using the roof console fixing screws (Note: at the front, fix together using the LOGO screws; insert rubber plugs into both sides of the rear rails)

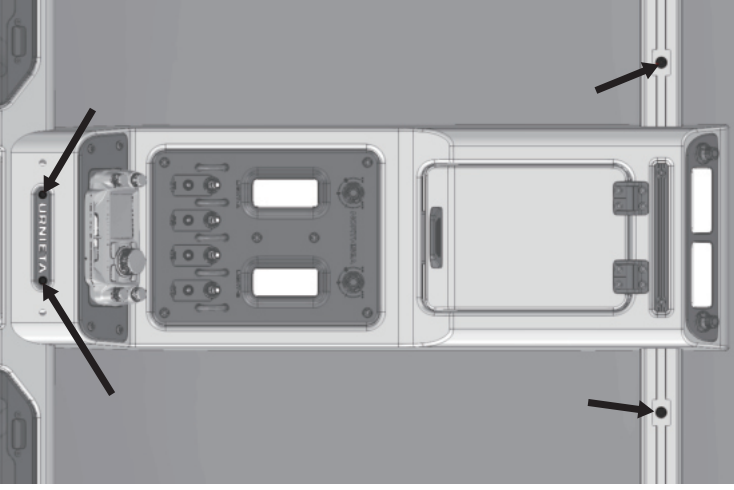


#13-01-A7

(此处的“A”为3门版吉姆尼安装方法的分章)
(The "A" here is the sub-section for the 6000R and 2730E installation method)

延侧边缝隙将包边条卡在机顶盒侧边后锁紧螺丝

Along the side gap, clip the edge trim strip onto the side of the roof console, then tighten the screws

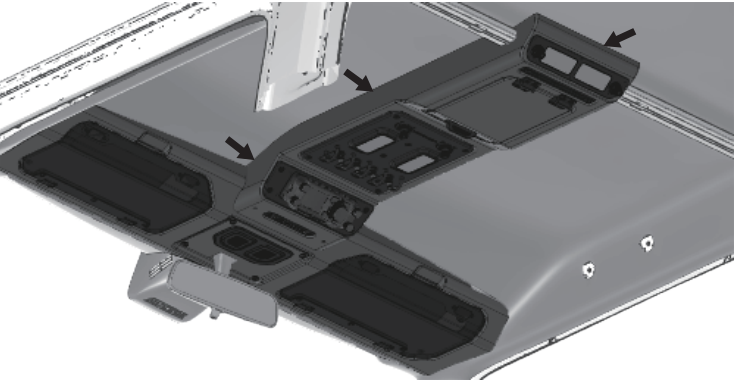


#13-01-B1

(此处的“B”为5门版吉姆尼安装方法的分章)
(The "B" here is the sub-section for the 5-door Jimny installation method)

打开储物盒将5门专用安装板固定在机顶盒上

Open the storage box and fix the 5-door dedicated mounting plate onto the roof console

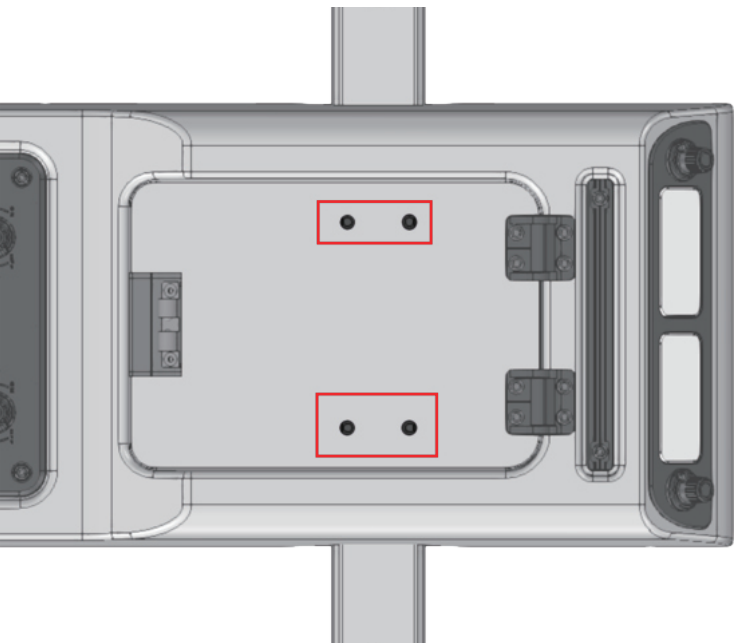


#13-01-B2

(此处的“B”为5门版吉姆尼安装方法的分章)
(The "B" here is the sub-section for the 5-door Jimny installation method)

将装好安装板的机顶盒使用机顶盒固定螺丝安装在车顶上(注意:前面螺丝与LOGO使用同样的螺丝)

Install the roof console with the mounting plate fitted onto the roof using the roof console fixing screws (Note: the front screws are the same screws as used for the LOGO)

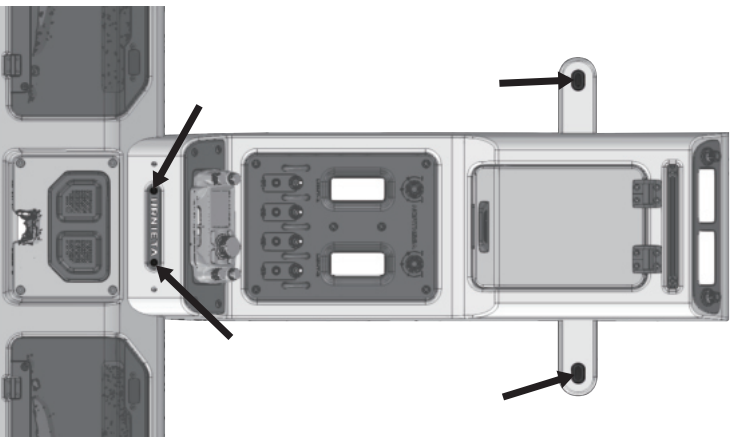


#13-01-B3

(此处的“B”为5门版吉姆尼安装方法的分章)
(The "B" here is the sub-section for the 5-door Jimny installation method)

延侧边缝隙将包边条卡在机顶盒侧边后锁紧螺丝

Along the side gap, clip the edge trim strip onto the side of the roof console, then tighten the screws

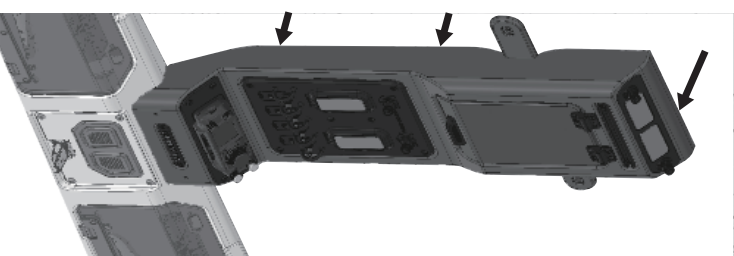

#JB74

产品物料 Product Materials

名称 Name	数量 Quantity	颜色 Color
遮阳板盒主体 Sun visor box body	1	灰色 Grey
机顶盒主体 Set-top box body	1	灰色 Grey
大导轨型材 961*48*22 Large guide rail profile 961*48*22	1	灰色 Grey
导轨支撑支架 Guide rail support bracket	1	黑色 Black
大导轨堵头 Large guide rail plug	1	灰色 Grey

小导轨型材 168*16*8.5 Small guide rail profile 168*16*8.5	1	黑色 Black
遮阳板盒支撑支架左 Sun visor box support bracket left	1	黑色 Black
遮阳板盒支撑支架右 Sun visor box support bracket right	1	黑色 Black
遮阳板盒主支撑支架 Main support bracket for sun visor box	1	黑色 Black
遮阳板盒前支撑支架 Sun visor box front support bracket	1	黑色 Black
遮阳板盒压纹包边条 Sun visor box embossed edge strip	2.5M	灰色 Grey
机顶盒灰色包边条 gray edging strip for set-top box	2.1M	灰色 Grey

顶盒主体喇叭盖板 Top box main speaker cover	1	灰色 Grey
喇叭支架组件（带喇叭） Speaker bracket assembly (with speaker)	1	黑色 Black
2730E电台面板支架 2730E Radio Panel Stand	1	黑色 Black
2730R电台外框 2730R Radio Frame	1	黑色 Black
6000R电台面板支架 6000R Radio Panel Stand	1	黑色 Black
机顶盒 LOGO Set-top box logo	1	黑色 Black
8芯手咪延长线 30CM 8-core microphone extension cable, 30cm	1	黑色 Black

6芯手咪延长线30CM 6-core microphone extension cable, 30cm		1	黑色 Black
8芯面板延长线5M 8-core panel extension cable 5M		1	黑色 Black
8芯手咪延长线5M 8-core microphone extension cable, 5m		1	黑色 Black
6芯手咪延长线5M 6-core microphone extension cable, 5m		1	黑色 Black
轧带 Strip		10	黑色 Black
ACC遮挡盖 ACC cover		1	灰色 Grey
ACC遮挡盖安装螺丝 ACC shielding cover mounting screws	内六角斜平头M4*8 M4*8 Angled Hex Head	2 (备用2颗) 2 (2 spare)	黑色 Black

顶盒主体喇叭盖板固定螺丝 Top box main body speaker cover fixing screws	内六角斜平头 M6*14 M6*14 Angled Hex Head	4	黑色 Black
后视镜安装螺丝 rearview mirror mounting screws	内六角斜平头 M6*25 M6*25 Angled Hex Head	2	黑色 Black
遮阳板盒支撑支架安装螺丝 Sun visor box support bracket mounting screws	斜平头内六角 M5*20 Slanted flat-head internal hexagon M5*20	2 (备用2颗) 2 (2 spare)	黑色 Black
遮阳板盒安装螺丝 Sun visor box mounting screws	内六角斜平头 M6*14 M6*14 Angled Hex Head	2 (备用2颗) 2 (2 spare)	本色 Primary Color
	大垫片 Ø6*Ø18*1 Large gasket Ø6*Ø18*1	2	本色 Primary Color
	薄平头内六角 M6*10 Thin flat-head internal hexagon M6*10	2	黑色 Black
	内六角斜平头 M6*14 M6*14 Angled Hex Head	2 (备用2颗) 2 (2 spare)	本色 Primary Color

机顶盒主体固定螺丝 Set-top box body fixing screws	杯头内六角 M4*14 Cup head internal hexagon M4*14	2 (备用2颗) 2 (2 spare)	黑色 Black
	斜平头内六角 M6*30 Slanted flat-head internal hexagon M6*30	2 (备用2颗) 2 (2 spare)	黑色 Black
导轨支架安装螺丝 Guide rail bracket mounting screws	斜平头内六角 M4*12 Slanted flat-head internal hexagon M4*12	2 (备用2颗) 2 (2 spare)	黑色 Black
	斜平头内六角 M8*10 Slanted flat-head internal hexagon M8*10	2 (备用1颗) 2 (1 spare)	黑色 Black
	大导轨滑块（定制专用） Large guide rail slider (custom-made)	2	本色 Primary Color
小导轨滑块 Small guide rail slider	镀镍欧标 20T型螺母M6 Nickel-plated European standard 20T type nut M6	4 (备用2颗) 4 (2 spare)	黑色 Black
支撑支架安装螺丝 Support bracket mounting screws	内六角斜平头 M6*20 M6*20 Angled Hex Head	4	黑色 Black

支撑支架安装螺丝 Support bracket mounting screws	M6防脱法兰螺母 M6 Anti-loosening flange nut	4	本色 Primary Color
喇叭支架与支撑主支架安装螺丝 Speaker bracket and main support bracket mounting screws	标准大垫片 M6 Standard large gasket M6	2	黑色 Black
	外六角法兰螺丝 M6*10 M6*10 external hex flange bolts	2	黑色 Black
6000R电台面板固定螺丝 6000R Radio Panel Mounting Screws	M5*10杯头螺丝 M5*10 cup head screw	1 (备用2颗) 1 (2 spare)	黑色 Black
2730E电台面板固定螺丝 2730E Radio Panel Mounting Screws	M2.5*5杯头螺丝 M2.5*5 cup head screw	2 (备用2颗) 2 (2 spare)	黑色 Black
	M3垫片 M3 gasket	2	黑色 Black

#JC74

产品物料 Product Materials

名称 Name	数量 Quantity	颜色 Color
遮阳板盒主体 Sun visor box body	1	灰色 Grey
机顶盒主体 Set-top box body	1	灰色 Grey
储物盒固定板 Storage box fixing plate	1	黑色 Black
小导轨型材 168*16*8.5 Small guide rail profile 168*16*8.5	1	黑色 Black
遮阳板盒支撑支架左 Sun visor box support bracket left	1	黑色 Black

遮阳板盒支撑支架右 Sun visor box support bracket right	1	黑色 Black
遮阳板盒主支撑支架 Main support bracket for sun visor box	1	黑色 Black
遮阳板盒前支撑支架 Sun visor box front support bracket	1	黑色 Black
遮阳板盒压纹包边条 Sun visor box embossed edge strip	2.5M	灰色 Grey
机顶盒灰色包边条 gray edging strip for set-top box	2.1M	灰色 Grey
顶盒主体喇叭盖板 Top box main speaker cover	1	灰色 Grey
喇叭支架组件（带喇叭） Speaker bracket assembly (with speaker)	1	黑色 Black

2730E电台面板支架 2730E Radio Panel Stand	1	黑色 Black
2730R电台外框 2730R Radio Frame	1	黑色 Black
6000R电台面板支架 6000R Radio Panel Stand	1	黑色 Black
机顶盒LOGO Set-top box logo	1	黑色 Black
8芯手咪延长线30CM 8-core microphone extension cable, 30cm	1	黑色 Black
6芯手咪延长线30CM 6-core microphone extension cable, 30cm	1	黑色 Black
8芯面板延长线5M 8-core panel extension cable 5M	1	黑色 Black

8芯手咪延长线5M 8-core microphone extension cable, 5m		1	黑色 Black
6芯手咪延长线5M 6-core microphone extension cable, 5m		1	黑色 Black
轧带 Strip		10	黑色 Black
ACC遮挡盖 ACC cover		1	灰色 Grey
ACC遮挡盖安装螺丝 ACC shielding cover mounting screws	内六角斜平头M4*8 M4*8 Angled Hex Head	2 (备用2颗) 2 (2 spare)	黑色 Black
顶盒主体喇叭盖板固定螺丝 Top box main body speaker cover fixing screws	内六角斜平头M6*14 M6*14 Angled Hex Head	4	黑色 Black
后视镜安装螺丝 rearview mirror mounting screws	内六角斜平头M6*25 M6*25 Angled Hex Head	2	黑色 Black

遮阳板盒支撑支架安装螺丝 Sun visor box support bracket mounting screws	斜平头内六角M5*20 Slanted flat-head internal hexagon M5*20	² (备用2颗) 2 (2 spare)	黑色 Black
遮阳板盒安装螺丝 Sun visor box mounting screws	内六角斜平头M6*14 M6*14 Angled Hex Head	² (备用2颗) 2 (2 spare)	本色 Primary Color
	大垫片Ø6*Ø18*1 Large gasket Ø6*Ø18*1	2	本色 Primary Color
	薄平头内六角M6*10 Thin flat-head internal hexagon M6*10	2	黑色 Black
	内六角斜平头M6*14 M6*14 Angled Hex Head	² (备用2颗) 2 (2 spare)	本色 Primary Color
机顶盒主体固定螺丝 Set-top box body fixing screws	杯头内六角M4*14 Cup head internal hexagon M4*14	² (备用2颗) 2 (2 spare)	黑色 Black
	斜平头内六角M6*30 Slanted flat-head internal hexagon M6*30	² (备用2颗) 2 (2 spare)	黑色 Black

支撑支架安装螺丝 Support bracket mounting screws	内六角斜平头M6*20 M6*20 Angled Hex Head	4	黑色 Black
	M6防脱法兰螺母 M6 Anti-loosening flange nut	4	本色 Primary Color
喇叭支架与支撑主支架安装螺丝 Speaker bracket and main support bracket mounting screws	标准大垫片M6 Standard large gasket M6	2	黑色 Black
	外六角法兰螺丝M6*10 M6*10 external hex flange bolts	2	黑色 Black
6000R电台面板固定螺丝 6000R Radio Panel Mounting Screws	M5*10杯头螺丝 M5*10 cup head screw	¹ (备用2颗) 1 (2 spare)	黑色 Black
2730E电台面板固定螺丝 2730E Radio Panel Mounting Screws	M2.5*5杯头螺丝 M2.5*5 cup head screw	² (备用2颗) 2 (2 spare)	黑色 Black
	M3垫片 M3 gasket	2	黑色 Black

产品参数 Product Parameters	
产品名称 NAME	Salado-机顶控制盒套件 Salado-Roof Console Kit
颜 色 COLOUR	武士黑 Matte Black
产品规格 SPECIFCATIONS	1036*1120*120MM



URNIETA®



官方公众号
@URNIETA



Instagram
@URNIETA_STARK



WhatsApp
WA.ME/85298238165

Official Website : WWW.URNIETA.COM