


URNIETA®

STEERING WHEEL KIT

方向盘套件
安装说明书



适用范围：吉姆尼-JB74 / JC74 (18-26年款)
APPLICABLE SCOPE: JIMNY-JB74 / JC74 (2018-2026 models)

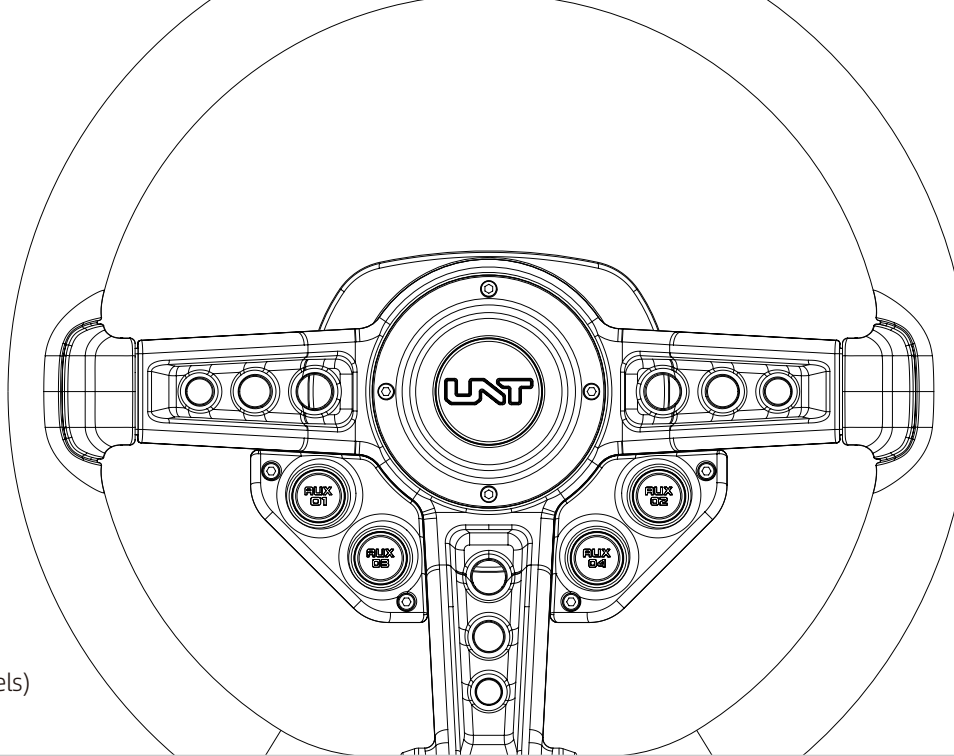

#1

将方向盘旋转在正中状态拆除原车气囊与方向盘 (注意：拆下气囊后在管柱和方向盘正中位置画中心线标记)


Rotate the steering wheel to the straight-ahead position and remove the original airbag and steering wheel. (Note: After removing the airbag, mark the centerline on the steering column and the center position of the steering wheel.)

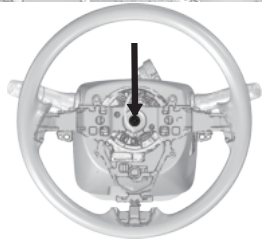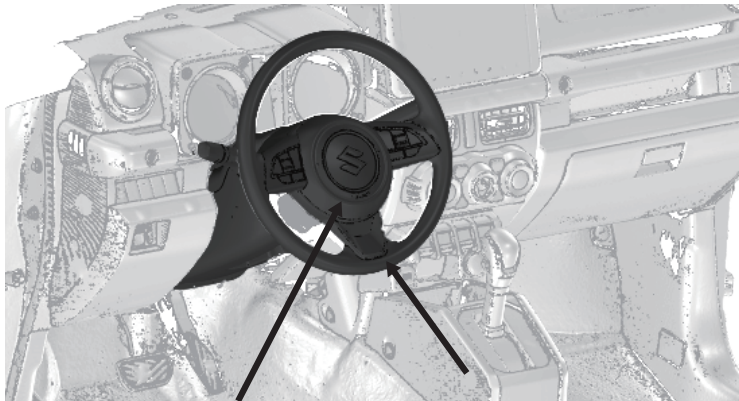

#2

拆除方向管柱上下壳


Remove the upper and lower steering column covers.

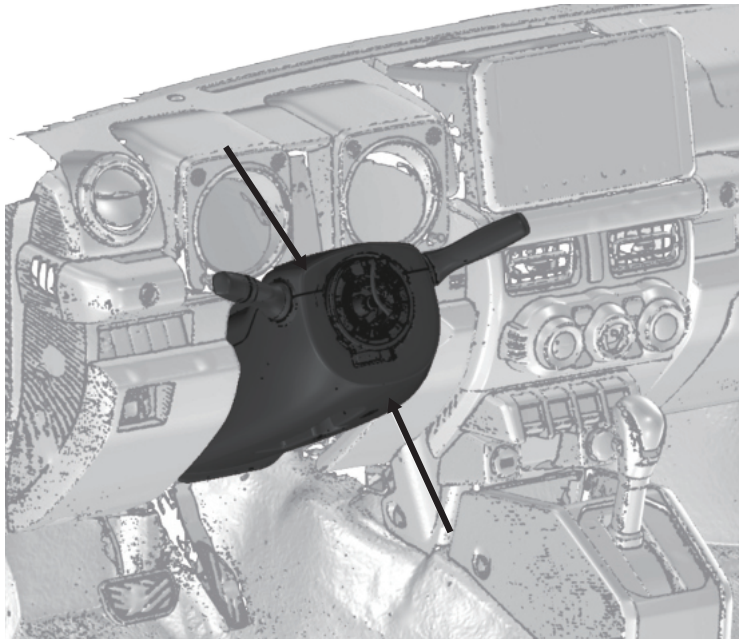

#3

将图示所示游丝位置插头拔掉并将游丝使用胶带固定以防止转动


Disconnect the connector at the clock spring position as shown in the figure, and secure the clock spring with tape to prevent it from rotating.

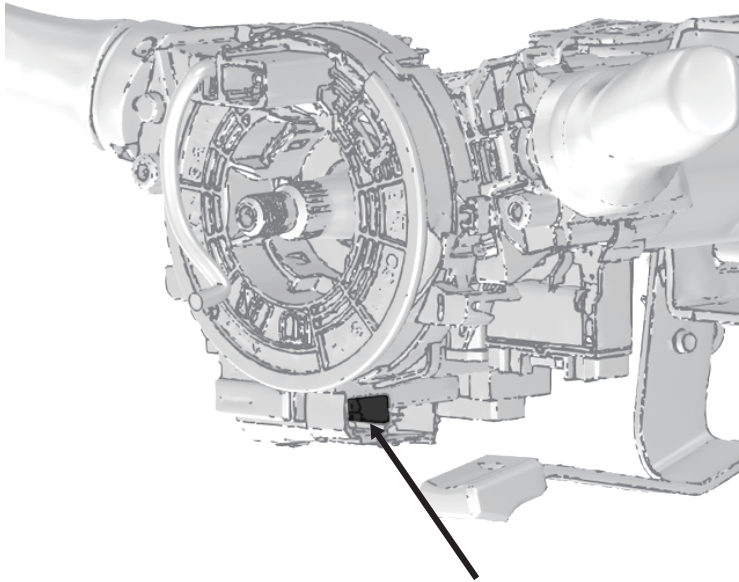

#4

将方向盘控制线束插在游丝图示位置，并将线束延方向盘管柱使用轧带固定


Plug the steering wheel control wiring harness into the clock spring at the position shown, and secure the harness along the steering column using cable ties.

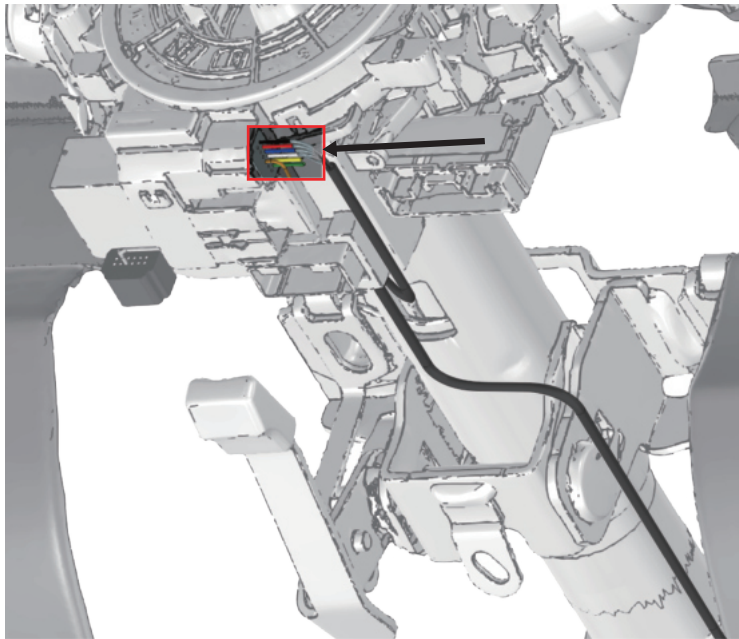

#5

将新线束单插头与原车游丝拔掉的插头对接



Connect the single connector of the new wiring harness to the original connector that was unplugged from the clock spring.

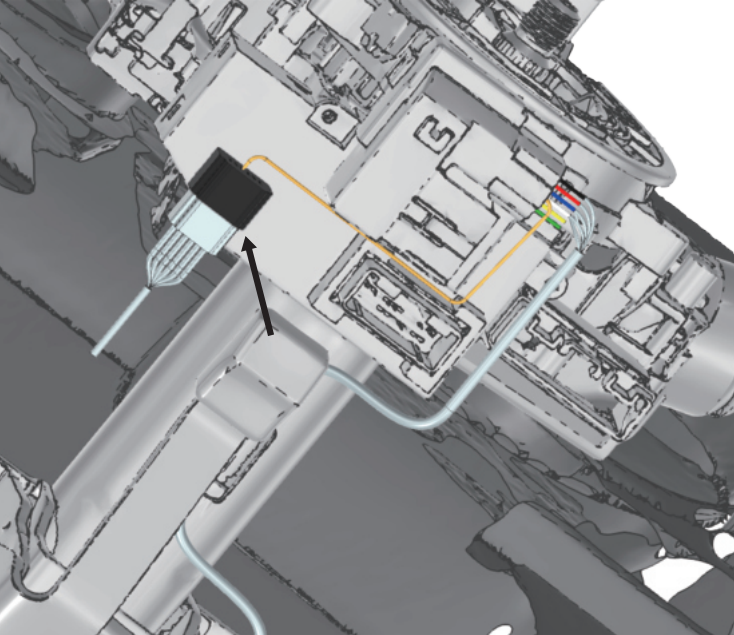

#6

将控制盒固定在图示空调口位置的网格上，并将线头另外一侧穿过蒸发箱底部


Secure the control box to the mesh at the A/C vent position shown in the figure, and route the other side of the wiring through the bottom of the evaporator case.

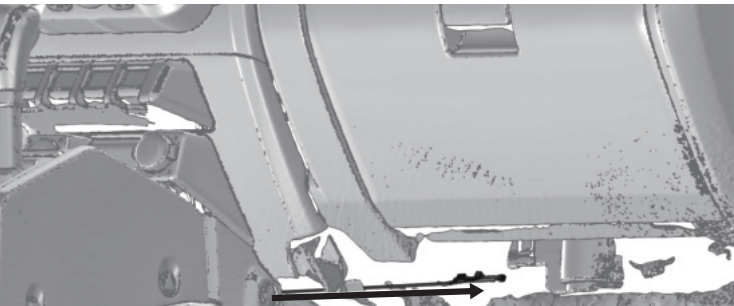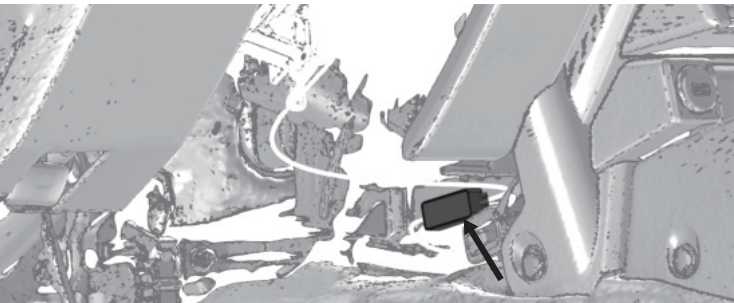

#7

线束连接

Connect the wiring harness.

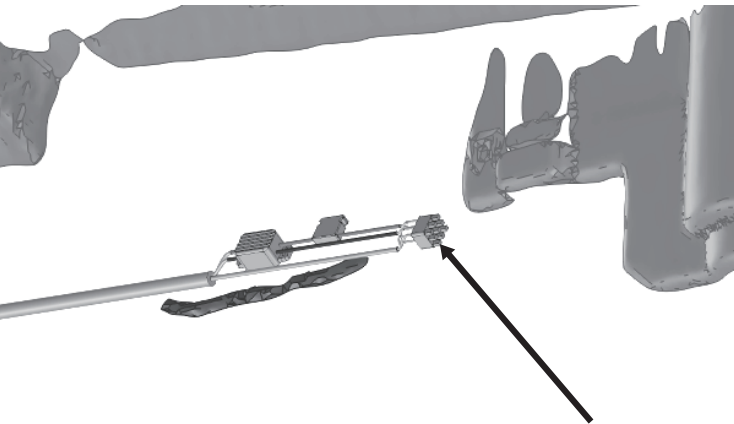

#7-A-01

(此处的“A”为YBOS保险盒连接安装方法的分章)
(Here, "A" refers to the section for the YBOS fuse box connection installation method.)

与YBOS保险盒连接（注意：此YBOS品牌保险盒需使用其旗下普通类保险盒不支持连接蓝牙触屏，WiFi类，其他品牌保险盒需自行改装进行安装）

Connect to the YBOS fuse box. (Note: This YBOS brand fuse box requires its standard fuse box; it does not support Bluetooth touchscreen or WiFi connection. Fuse boxes of other brands require modification for installation.)




#7-B-01

(此处的“B”为继电器连接安装方法的分章)
(此处的"B"为继电器连接安装方法的分章)

与继电器连接


Connect to the relay.

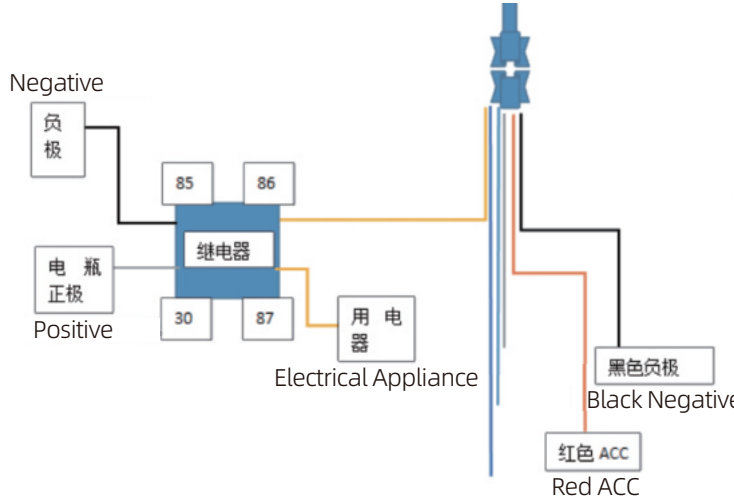

#8

拆除固定游丝的胶带，将新方向盘线束与原车游丝上插头对插并将喇叭线束与气囊线束从图示所在避空位置穿出


Remove the tape securing the clock spring. Connect the new steering wheel wiring harness to the connector on the original clock spring, and route the horn harness and airbag harness through the clearance position shown in the figure.

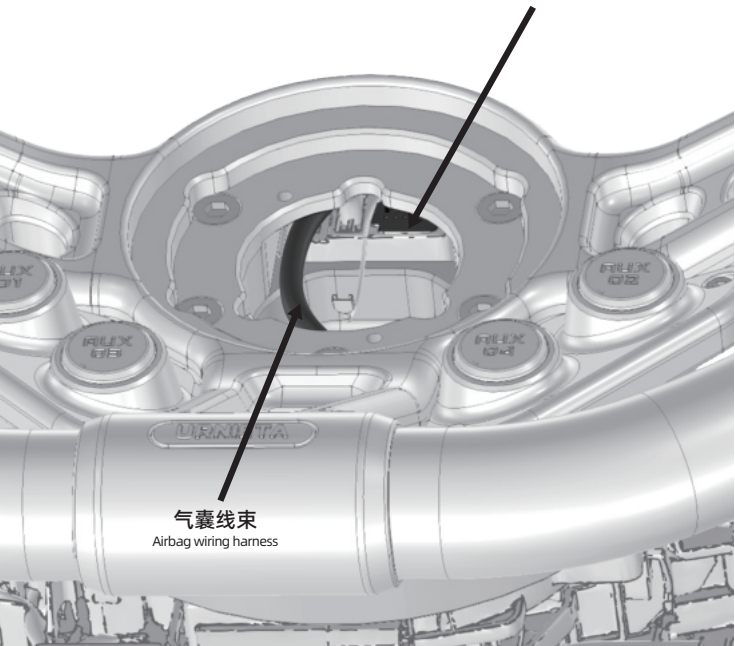

#9

使用原车螺丝固定方向盘


Secure the steering wheel using the original screws.

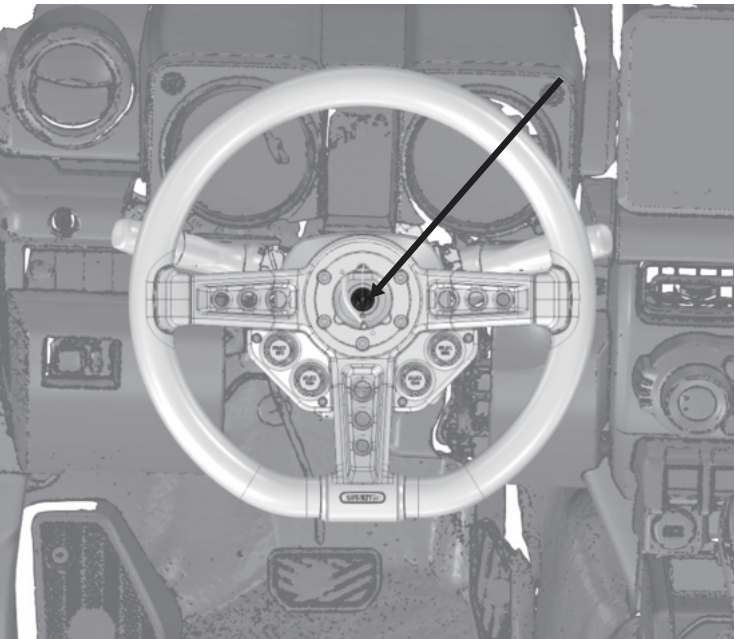

#10

将气囊屏蔽器与原车气囊插头对插（注意：通电测试方向盘按键是否通电及气囊灯是否亮）


Connect the airbag emulator to the original airbag connector. (Note: Power on and test whether the steering wheel buttons are powered and whether the airbag warning light illuminates.)

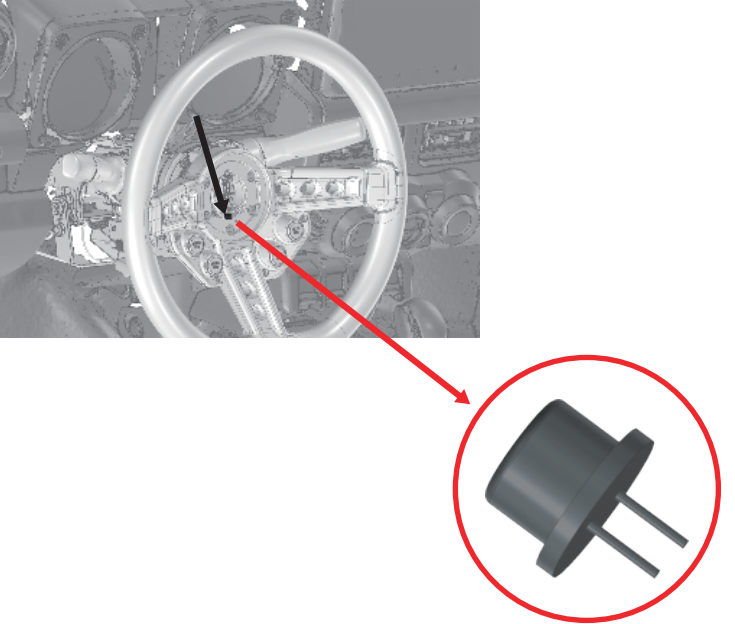

#11

将喇叭开关与线束连接并使用喇叭专用螺丝进行固定（注意：测试喇叭是否工作）


Connect the horn switch to the wiring harness and secure it using the horn-specific screws. (Note: Test whether the horn works.)

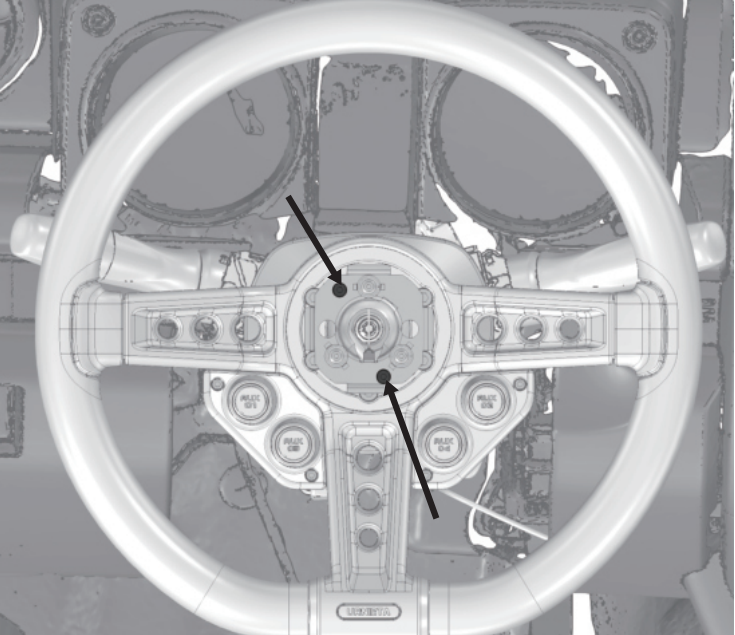

#12

将喇叭外盖扣在喇叭开关上



Snap the horn cover onto the horn switch.

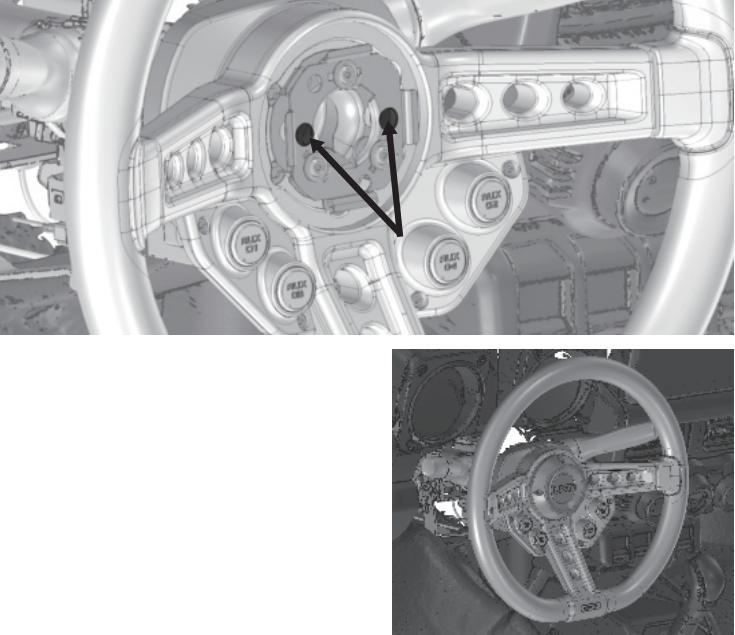

#13

将方向管柱的上线壳固定在原车位置上

Secure the upper housing of the steering column to its original position on the vehicle.

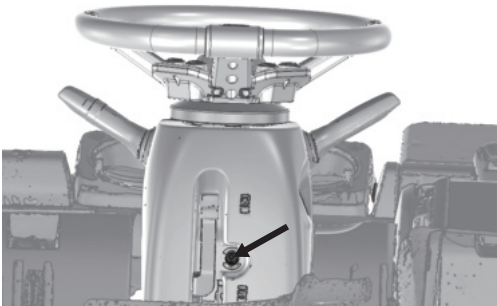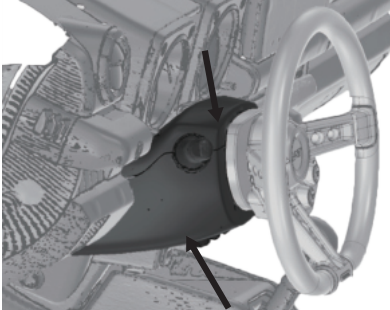

产品物料 名称 Name	数量 Quantity	颜色 Color
UNT-方向盘主体组件 UNT - Steering Wheel Main Components	1	黑色 Black
气囊屏蔽器 Airbag shield	1	黑色 Black
喇叭盖 Speaker cover	1	黑色 Black
喇叭开关 horn switch	1	本色 Primart Color
方向盘控制线束 Steering wheel control wiring harness	1	黑色 Black
扎带（10CM） Cable ties (10CM)	10	黑色 Black

橡胶堵头组件 Rubber plug assembly	橡胶堵头右1 Rubber plug right 1	1	黑色 Black
	橡胶堵头左1 Rubber plug left 1	1	黑色 Black
	橡胶堵头3 Rubber plug 3	2	黑色 Black
	橡胶堵头右2 Rubber plug right 2	1	黑色 Black
	橡胶堵头左2 Rubber plug left 2	1	黑色 Black
胶堵固定螺丝 Plug fixing screw	内六角杯头螺丝M2*14 M2*14 socket head cap screw	4	本色 Primart Color
喇叭开关安装螺丝 Speaker switch mounting screws	内六角杯头螺丝M4*8 M4*8 socket head cap screw	2	黑色 Black

产品参数 Product Parameters	
产品名称 NAME	Salado-方向盘套件 Salado-Steering Wheel Kit
颜 色 COLOUR	武士黑 Matte Black
产品规格 SPECIFCATIONS	143*363*143MM

URNIETA®



官方公众号
@URNIETA



Instagram
@URNIETA_STARK



WhatsApp
WA.ME/85298238165