


SIDESKIRT KIT

侧唇套件
安装说明书

适用范围：吉姆尼-JB74 / JC74 (18-26年款)
APPLICABLE SCOPE: JIMNY-JB74 / JC74 (2018-2026 models)

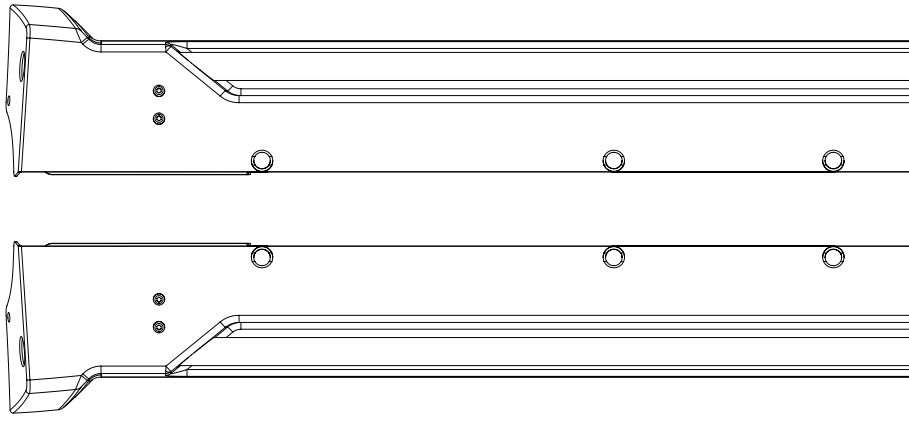

#1

拆除原车侧唇

Remove the original side skirts.



#2

如图所示在线位置将轮眉边角切除


As shown in the figure, cut the corner of the fender flare at the marked line position.



#3-01

安装新侧唇支撑支架（注意：下部大孔使用原车侧唇卡扣）


Install the new side skirt support bracket. (Note: Use the original side skirt clips for the large lower holes.)

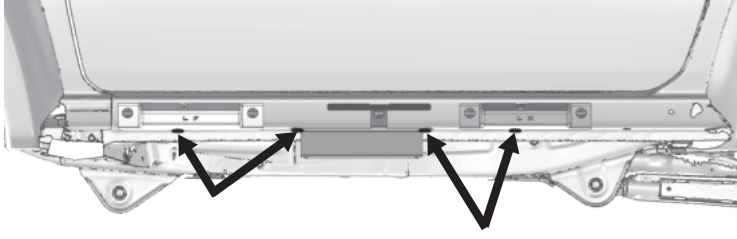

#3-02

如图所示，拆下原车前叶子板下螺丝，并使用此螺丝安装前支架


As shown in the figure, remove the screws from the bottom of the original front fender and use these screws to install the front bracket.

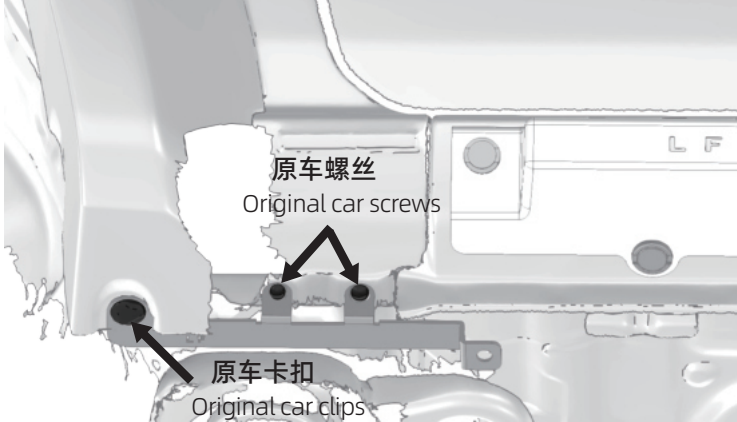

#3-03

拆下后小挡泥板图示螺丝，并按图示螺丝安装后支架


Remove the indicated screw from the rear small mud flap and install the rear bracket using the screw as shown.

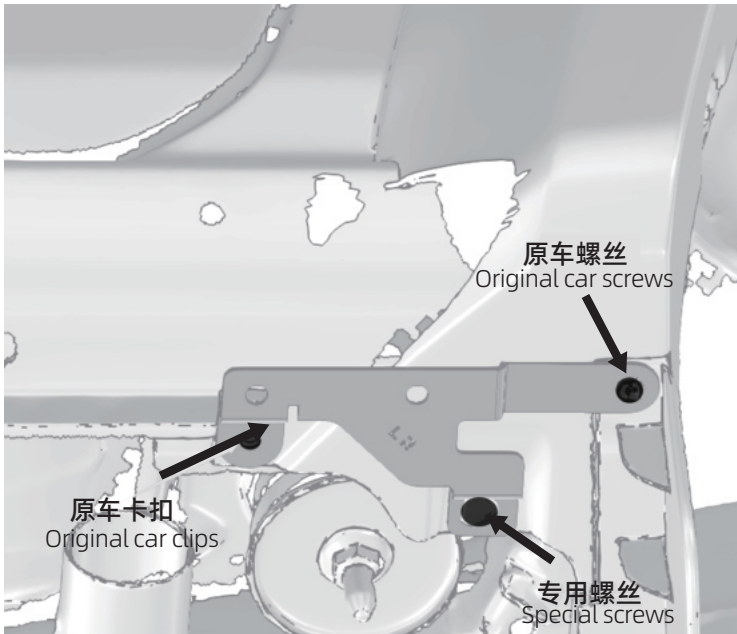

#3-04

将弹片螺丝卡在下图所示位置车壳上（注：在轮眉下车壳孔位，不是轮眉孔）


Clip the spring nut screw onto the vehicle body at the position shown in the figure below. (Note: This is the hole on the body under the fender flare, not the hole on the fender flare itself.)

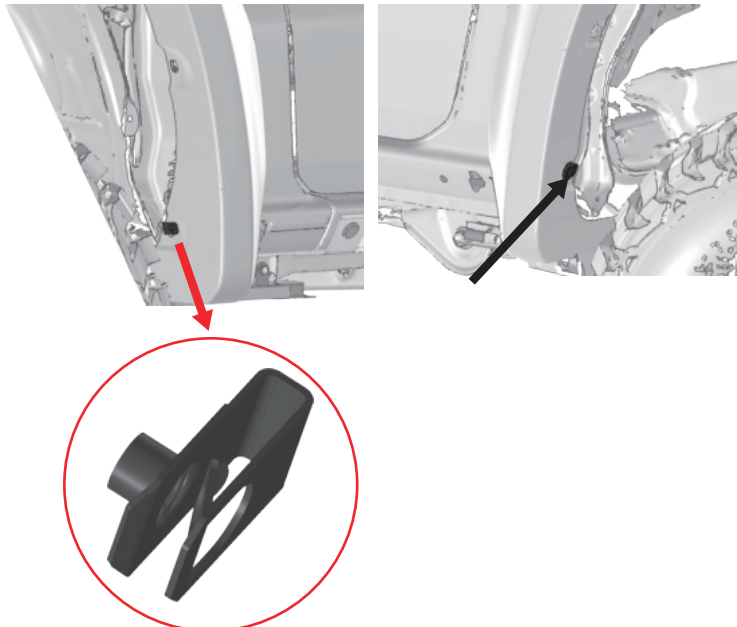

#4-01

在轮眉下安装位置涂抹助粘剂


Apply adhesion promoter to the installation area under the fender flare.

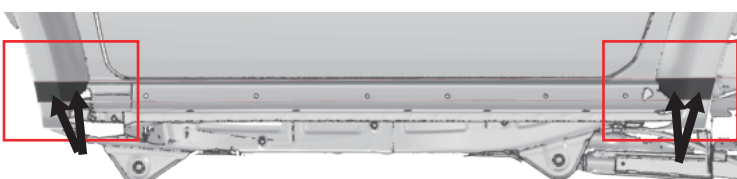

#4-02

揭下中支架3M胶与侧唇两侧3M胶将侧唇定位在支架上


Remove the backing from the 3M tape on the center bracket and both sides of the side skirt, then position the side skirt onto the brackets.

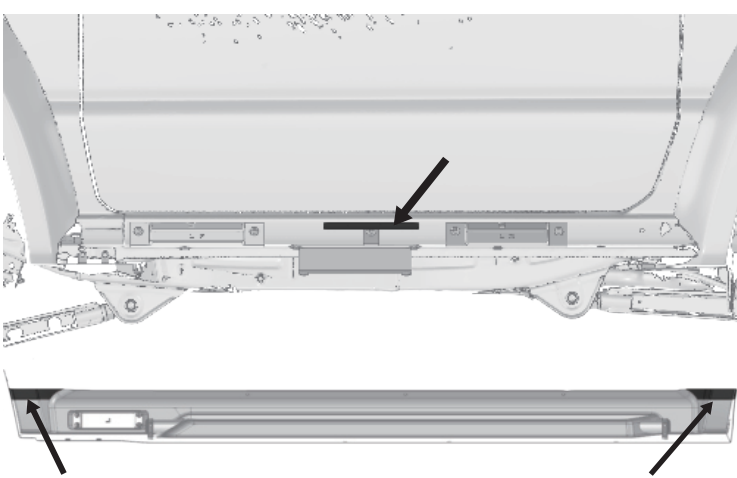

#4-03

安装侧唇上部螺丝与下部卡扣

Install the upper screws and lower clips for the side skirt.

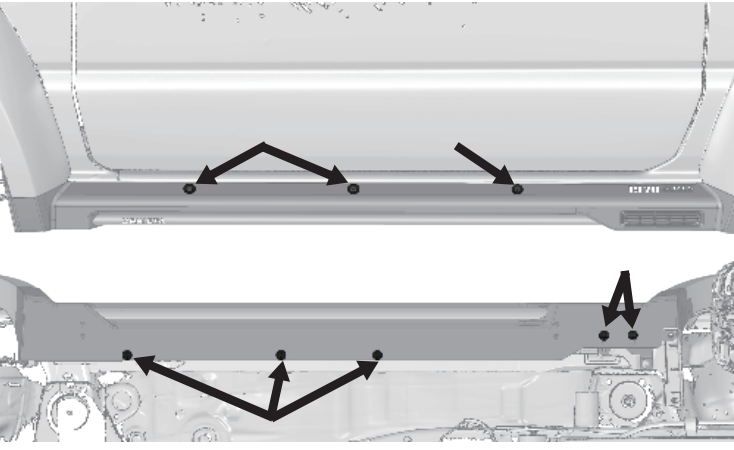

#4-04

安装前后螺丝


Install the front and rear screws.



#4-05

所有螺丝与卡扣安装好之后粘贴侧方防滑贴

After all screws and clips are installed, apply the side anti-slip stickers.

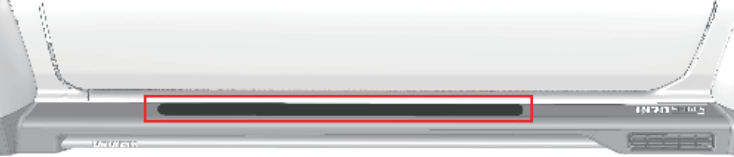

产品物料 Product Materials

名称 Name	数量 Quantity	颜色 Color
驾侧唇主体 Driver's side lip body	1	黑色 Black
副驾侧唇主体 Passenger side lip body	1	黑色 Black
主架前铁支架 Main frame front iron support	1	黑色 Black
副驾前铁支架 Front passenger side metal bracket	1	黑色 Black
主架后铁支架 Main frame rear iron support	1	黑色 Black

副驾后铁支架 Passenger rear metal bracket	1	黑色 Black
主架前塑料支架 Main frame front plastic bracket	1	黑色 Black
副驾前塑料支架 Front plastic bracket for passenger seat	1	黑色 Black
主架后塑料支架 Main frame rear plastic bracket	1	黑色 Black
副驾后塑料支架 plastic bracket behind the passenger seat	1	黑色 Black
主架中铁支架 Main frame China Railway support	1	黑色 Black
副驾中铁支架 Passenger seat support frame	1	黑色 Black

侧唇防滑贴 Side lip anti-slip pads		2	黑色 Black
助黏剂 Adhesive		6	黑色 Black
挡泥板主架支架 Mudguard main frame support		1	黑色 Black
挡泥板副架支架 Mudguard Subframe Support		1	黑色 Black
前铁支架安装螺丝 Front bracket mounting screws	膨胀穿心钉螺丝卡扣M8 Expansion through-hole screw clip M8	2	黑色 Black
后铁支架安装螺丝 Rear bracket mounting screws	内六角斜平头螺丝M6*16 M6*16 Angled Hex Head Screws	2	黑色 Black
	M6法兰防脱螺母 M6 flange anti-loosening nut	2	黑色 Black

塑料支架与中铁支架安装卡扣 Plastic bracket and China Railway bracket mounting clips	膨胀穿心钉螺丝卡扣M8 Expansion through-hole screw clip M8	14	黑色 Black
主体上固定螺丝 Screws on the main body	M6*14内六角薄平头螺丝 M6*14 socket head cap screw	6	黑色 Black
侧唇前后主体安装螺丝 Side lip front and rear main body mounting screws	M6专用弹片螺母 M6 dedicated spring nut	6	黑色 Black
	内六角斜平头螺丝M6*20 M6*20 Socket Head Screw	6	黑色 Black
	M6大垫片 M6 large gasket	6	黑色 Black
	内六角斜平头螺丝M6*16 M6*16 Angled Hex Head Screws	2	黑色 Black
主体与支架连接卡扣 Main body and bracket connection buckle	膨胀穿心钉螺丝卡扣M8 Expansion through-hole screw clip M8	12	黑色 Black

挡泥板支架安装螺丝 Mudguard bracket mounting screws	M6大垫片 M6 large gasket	4	黑色 Black
	内六角斜平头螺丝M6*20 M6*20 Socket Head Screw	4	黑色 Black

产品参数

Product Parameters

产品名称 NAME	1970-侧唇套件 Salado-Roof Console Kit
颜色 COLOUR	武士黑 Matte Black
产品规格 SPECIFICATIONS	1433*155*105MM

URNIETA®



官方公众号
@URNIETA



Instagram
@URNIETA_STARK



WhatsApp
WA.ME/85298238165