


FRONT BUMPER

前包围套件
安装说明书


适用范围：吉姆尼-JB74 / JC74 (18-26年款)
APPLICABLE SCOPE: JIMNY-JB74 / JC74 (2018-2026 models)

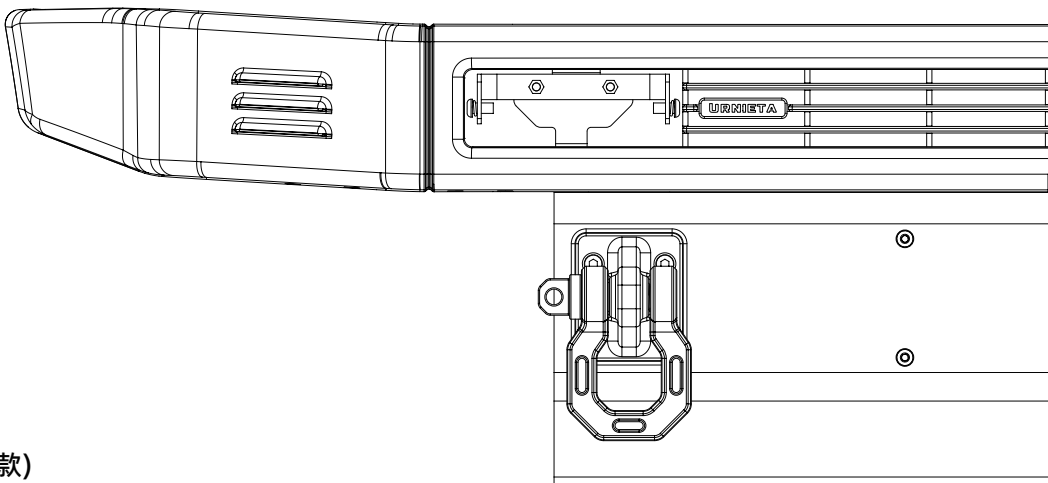

#1

拆除原车前杠/下聚风罩/中网/上导流罩


Remove the original front bumper, lower air deflector, grille, and upper air guide.

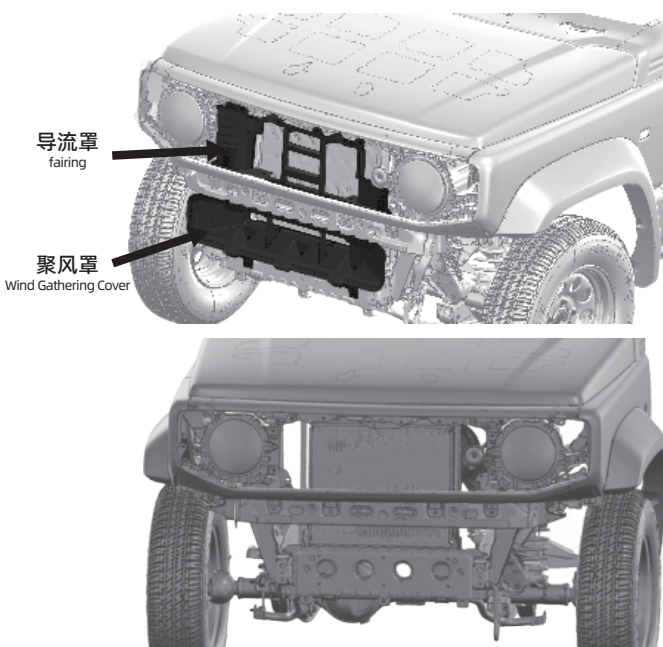

#2

需要对原车内衬进行切割到合适位置


The original inner fender liner needs to be cut to the appropriate position.

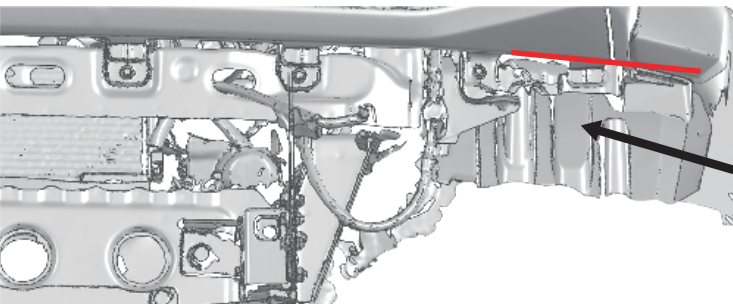

#3-01

用主体安装钣金件配套螺丝安装，螺丝全部带上后拧紧斜平头螺丝再拆掉杯头螺丝


Install using the screws provided with the main body mounting bracket. After all screws are started, tighten the flat head screws, then remove the socket head screws.

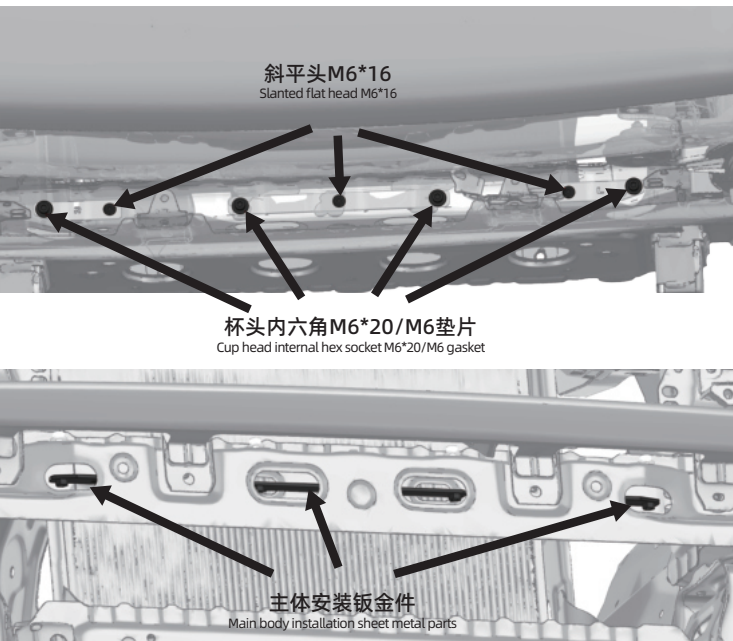

#3-02

安装主体钣金支架，用图中标记的原车孔位和螺丝


Install the main body metal bracket using the original vehicle holes and screws marked in the figure.

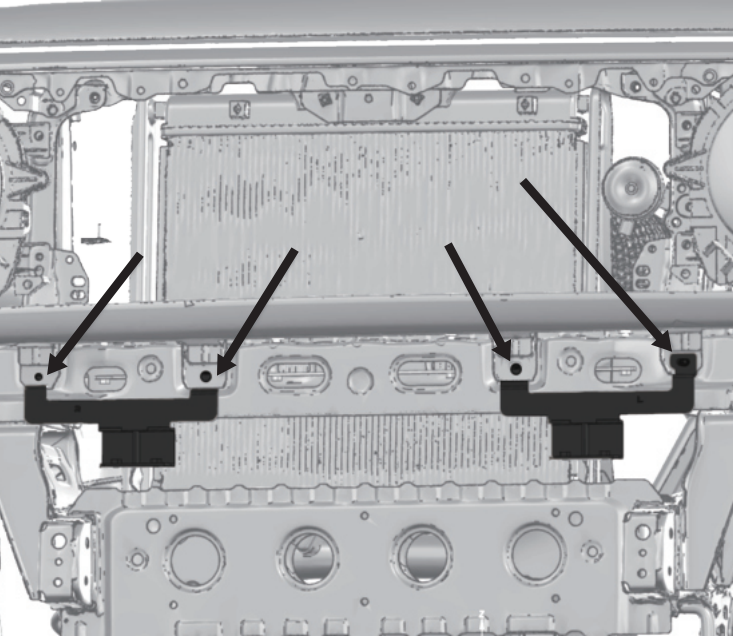

#3-03

如图所示，用主体安装钣金和主体安装支架配套杯头螺丝带上不要拧紧，调整前包围主体与车身的距离合适位置再把螺丝拧紧，把原车上导流罩和中网装回


As shown, use the socket head screws provided with the main body mounting bracket and main body mounting bracket. Start them but do not tighten. Adjust the distance between the front bumper main body and the vehicle body to a suitable position, then tighten the screws. Reinstall the original upper air guide and grille.

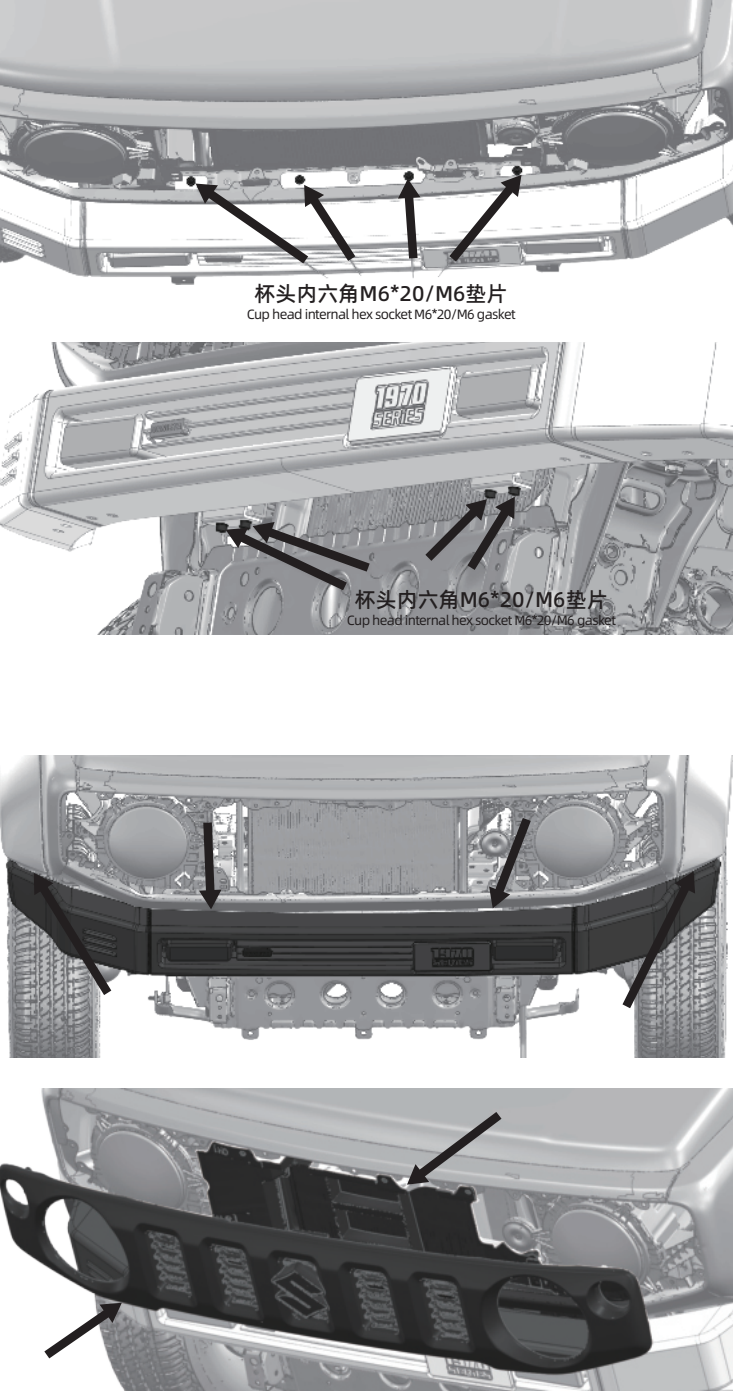

#4-01

安装护板安装钣金-1，确保法兰M10和法兰M8螺丝可轻松插入与拔出后拧紧法兰M6螺丝再拔出法兰M10和M8螺丝


Install the skid plate mounting bracket-1. Ensure that the M10 flange screws and M8 flange screws can be easily inserted and removed, then tighten the M6 flange screws, and finally remove the M10 and M8 flange screws.

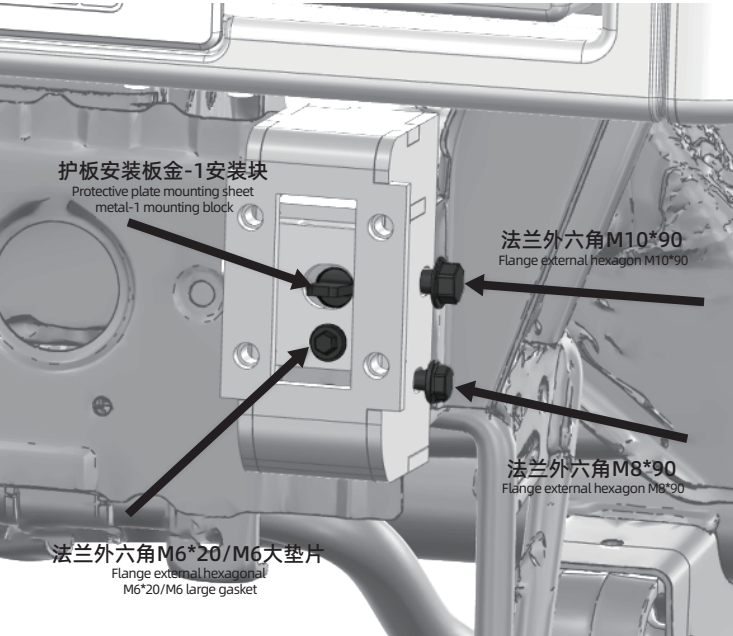

#4-02

如图所示，用配套螺丝安装护板安装钣金-2，注意标记孔不能有偏差


As shown, use the provided screws to install the skid plate mounting bracket-2. Note that the marked holes must not be misaligned.

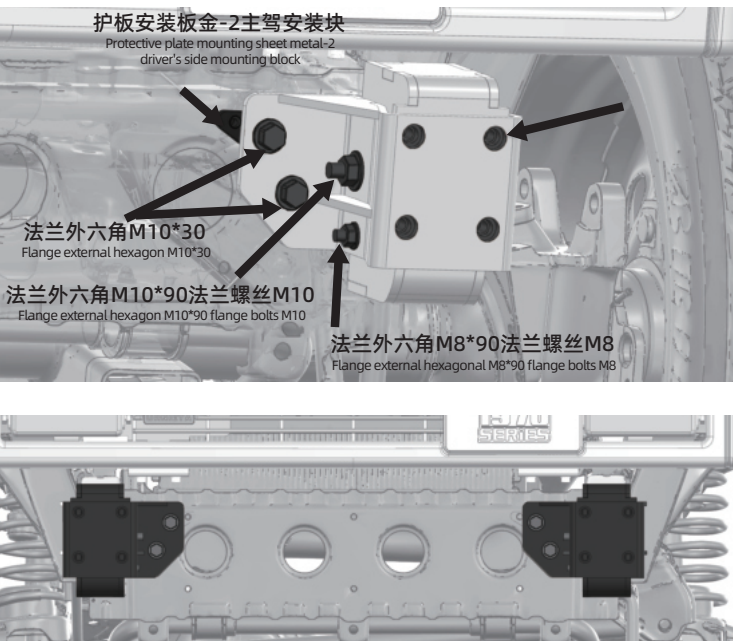

#4-03

如图所示，用护板与拖车钩底座对应配套螺丝安装

As shown, use the corresponding screws provided to install the skid plate and the tow hook base.

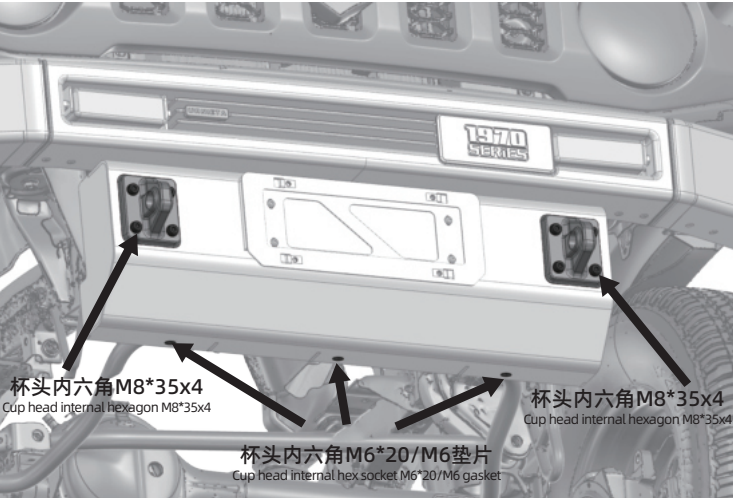

产品物料 Product Materials

名称 Name			数量 Quantity	颜色 Color
1970前包围主体组件 1970 front bumper body assembly			1	黑色 Black
包围主体主驾安装钣金 Body panel installation for driver's side			1	黑色 Black
包围主体安装钣金 Enclosing body sheet metal installation			1	黑色 Black
包围主体副驾安装钣金 Body panel installation for passenger side			1	黑色 Black
包围主体主驾安装支架 Surrounding main body driver's side mounting bracket			1	黑色 Black
包围主体副驾安装支架 Surrounding main body passenger seat mounting bracket			1	黑色 Black
护板主体组件 Protective plate main components	护板主体 Guard plate body	12.9级内六角杯头螺丝M8*35 M8*35 12.9 grade internal hex socket head cap screw	8	黑色 Black
	拖车钩底座 Trailer hook base		2	黑色 Black
主驾护板安装支架组件 Driver's side skid plate mounting bracket assembly			1	黑色 Black
副驾护板安装支架组件 Passenger side skid plate mounting bracket assembly			1	黑色 Black

产品参数
Product Parameters

产品名称 NAME	1970-前包围套件 1970-Front Bumper
颜 色 COLOUR	武士黑 Matte Black
产品规格 SPECIFCATIONS	1596*338*368MM

URNIETA®



官方公众号
@URNIETA



Instagram
@URNIETA_STARK



WhatsApp
WA.ME/85298238165