


URNIETA®

GULLWING WINDOW KIT

欧翼窗套件
安装说明书

适用范围：吉姆尼-JB74 (18-26年款)


APPLICABLE SCOPE: JIMNY-JB74 (2018-2026 models)

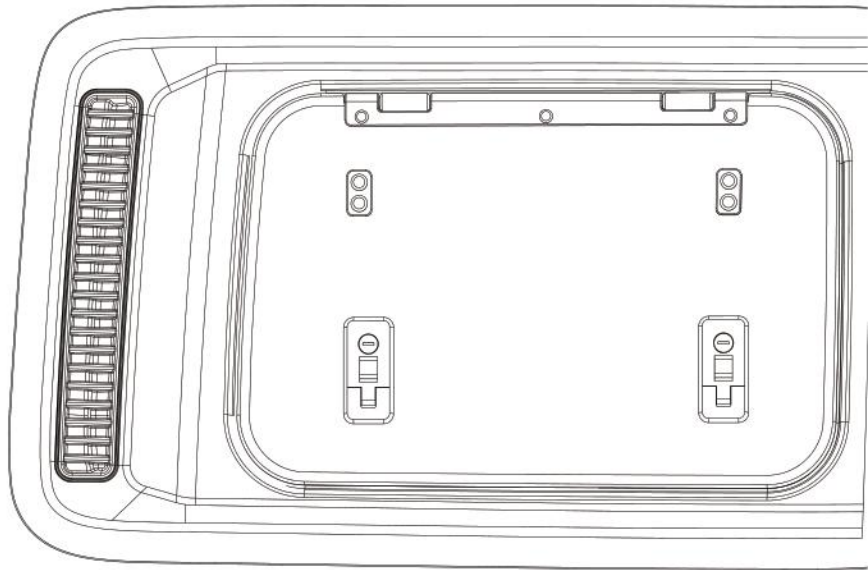

#1

拆除原车玻璃


Remove the original vehicle glass.

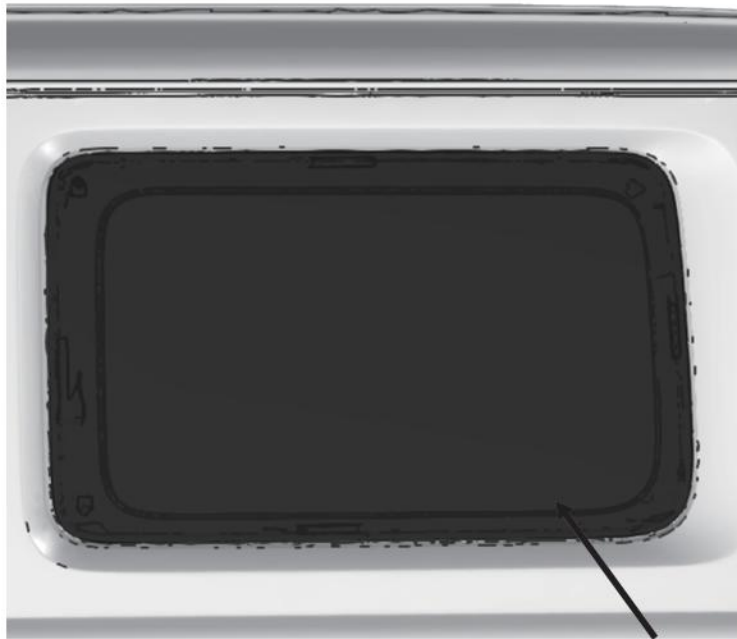

#2

拆除玻璃下垫块


Remove the lower glass padding blocks.

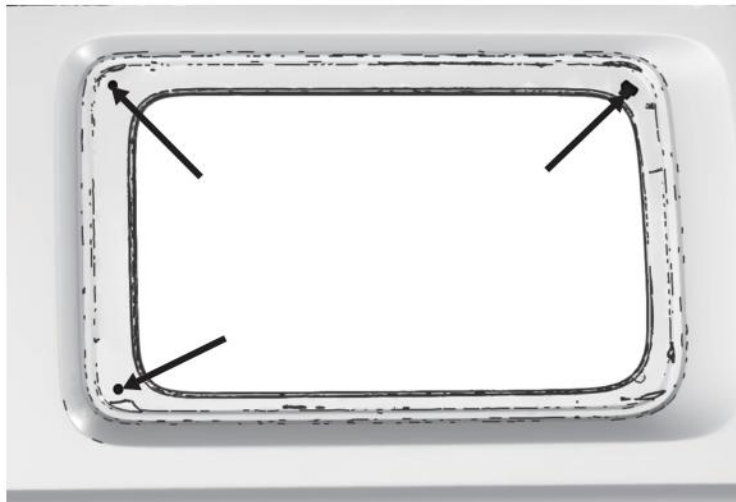

#3

拆除后壳壳体固定螺丝拿下后壳

Remove the rear housing fixing screws and take off the rear housing.

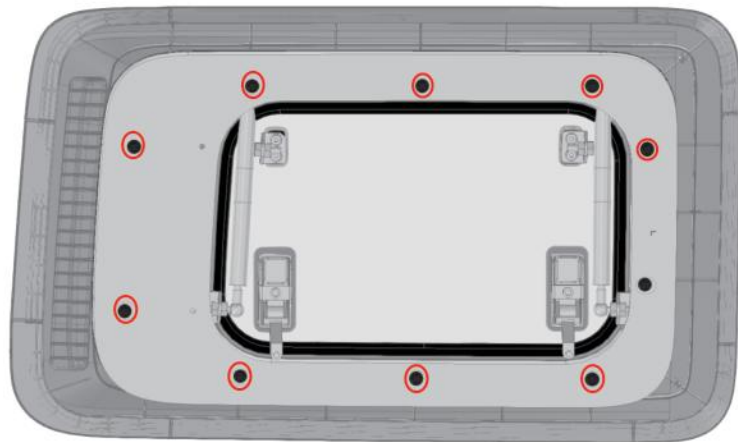

#4

如需喷漆需将壳体主体上所有配件拆除（注意：拆除配件及螺丝需保存好，拆卸拍照记录以便恢复）


If painting is required, remove all accessories from the main housing body. (Note: Keep all removed accessories and screws properly stored; take photos during disassembly for later restoration.)



#5

将侧窗放平在平台上在图示所在筋线上打玻璃胶


Place the side window flat on the workbench and apply glass sealant along the rib lines shown in the diagram.

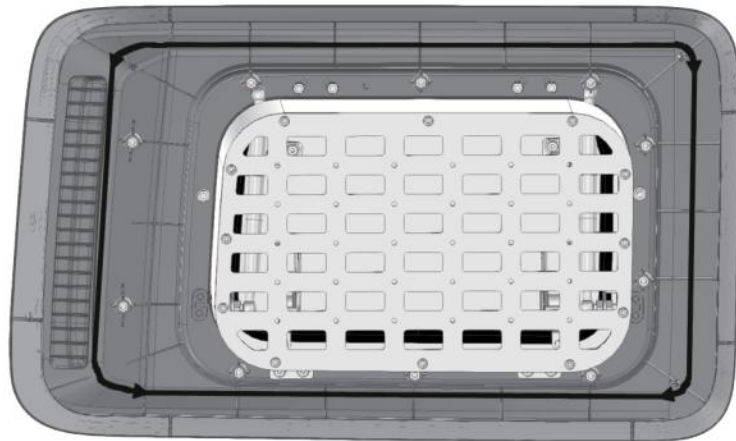

#6

在拆除玻璃的边缘位置涂抹助粘剂



Apply adhesion promoter to the edge area where the glass was removed.

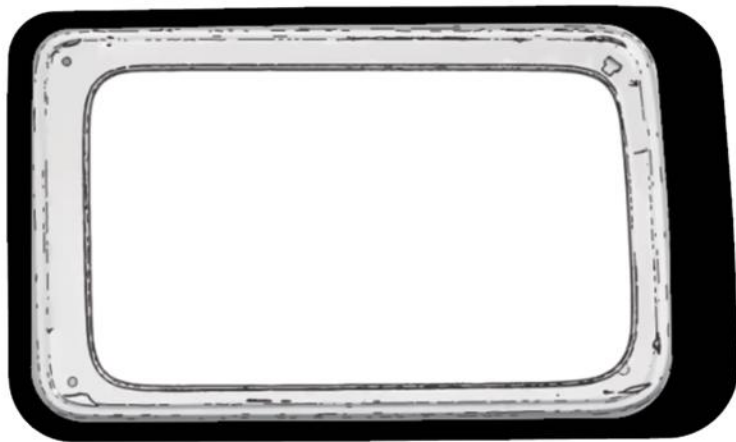

#7

将侧窗粘贴在车壳上（注意：侧窗定位销与车壳定位孔位需对齐）


Attach the side window onto the vehicle body. (Note: The positioning pins of the side window must align with the locating holes on the vehicle body.)

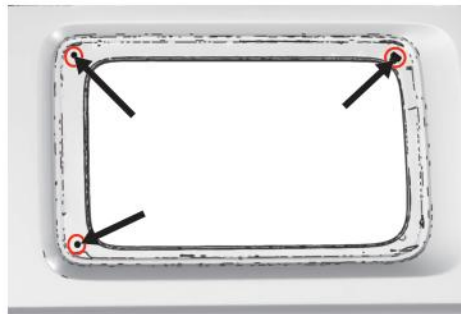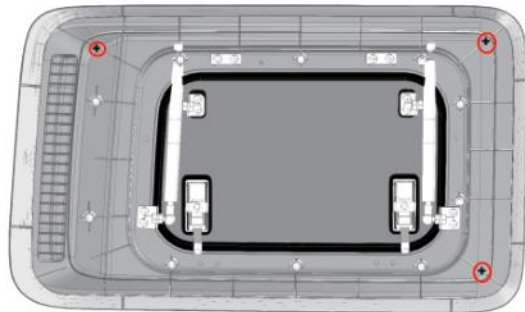

#8

将包边条卡在后壳上

Clip the edge trim onto the rear housing.

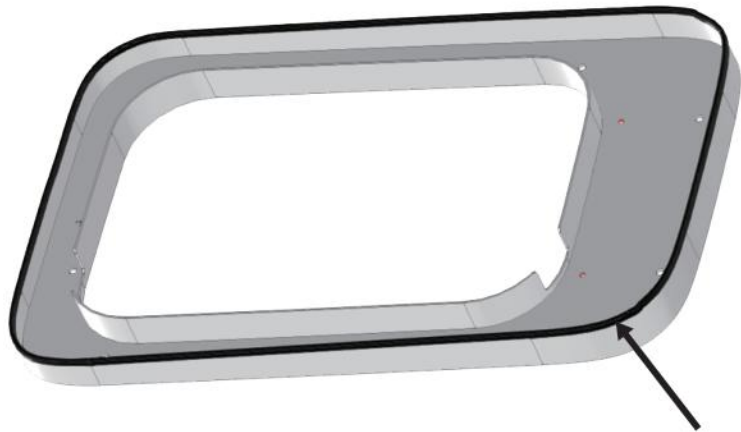

#9

将后壳卡在车内侧窗背面并使用螺丝锁住，螺丝无需锁太紧，后壳不晃动即可（注意：螺丝无需锁太紧，否则会将外壳拉变形，1号位置使用长螺丝，所有螺丝需打螺丝胶）

Install the rear housing onto the back of the side window from inside the vehicle and secure it with screws. Do not tighten the screws too much – just tight enough that the rear housing does not wobble. (Note: Do not overtighten the screws, otherwise the housing will be deformed. Use long screws for Position 1. Apply threadlocker to all screws.)



产品物料 Product Materials

名称 Name		数量 Quantity	颜色 Color
JMN-侧窗主体组件 JMN - Side Window Main Assembly		1	黑色 Black
JMN-侧窗底壳组件 JMN - Side Window Bottom Housing Assembly		1	黑色 Black
JMN-侧窗底壳安装螺丝 JMN - Side Window Bottom Housing Mounting Screws	外六角法兰螺丝M6*45 Hexagon Flange Screw M6*45	2 (备用2颗) 2 (2 spare)	黑色 Black
	外六角法兰螺丝M6*30 Hexagon Flange Screw M6*30	8 (备用2颗) 8 (2 spare)	黑色 Black
助粘剂 Adhesion Promoter / Primer		1	黑色 Black

玻璃胶 Glass Sealant / Polyurethane Adhesive	1	黑色 Black
螺丝胶 Threadlocker	1	黑色 Black
搭扣锁钥匙 Latch Lock Key	2	黑色 Black

产品参数

Product Parameters

产品名称

NAME

1970-欧翼窗套件
1970-Gullwing Window Kit

颜色

COLOUR

武士黑
Matte Black

产品规格

SPECIFICATIONS

747*450*216MM

URNIETA®



官方公众号
@URNIETA



Instagram
@URNIETA_STARK



WhatsApp
WA.ME/85298238165

Official Website : WWW.URNIETA.COM