

AVS[®] Y62

WARRIOR EXHAUST VALVE CONTROL KIT



INSTRUCTION MANUAL

1 LOCATE THE WIRING LOOM

Remove the lower steering column panel.



Look for a loom labelled **"BiModal"** — it's tucked just under the steering wheel.

2 EXPOSE THE WIRES

Carefully slice open the loom's sheathing.



Inside you'll find **green and black wires** — these are the ones you need.


3 CONNECT THE EXHAUST VALVE WIRES

Match the **green** and **black** and the **blue** to the **green**.
Make sure to solder the connections.



4 WIRE THE SWITCH ILLUMINATION

Find the **white plug** nearby.
Tap into the **blue wire with yellow trace** — this gives you illumination power.

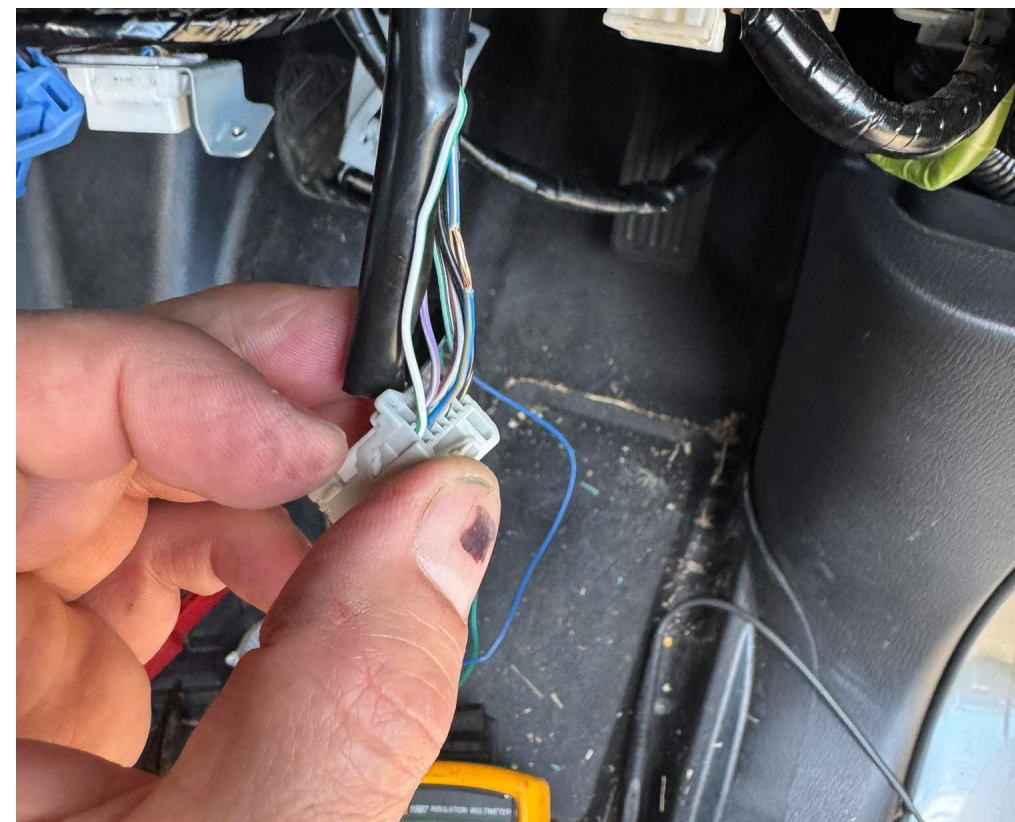

5 CONNECT LIGHTING GROUND

Crimp a ring terminal onto the lighting ground wire.
After that secure it to an existing **chassis screw** under the dash.



6 TEST AND TIDY UP

Turn the switch on/off and check the exhaust valve responds.
Make sure the illumination works too.
Once that is done, tidy up the wiring with tape or conduit.

